



HD OMNI Guide

Version 9.0

Legal Notices

This guide is copyrighted ©2010 by Avid Technology, Inc., (hereafter "Avid"), with all rights reserved. Under copyright laws, this guide may not be duplicated in whole or in part without the written consent of Avid.

003, 96 I/O, 96i I/O, 192 Digital I/O, 192 I/O, 888|24 I/O, 882|20 I/O, 1622 I/O, 24-Bit ADAT Bridge I/O, AudioSuite, Avid, Avid DNA, Avid Mojo, Avid Unity, Avid Unity ISIS, Avid Xpress, AVoption, Axiom, Beat Detective, Bomb Factory, Bruno, C|24, Command|8, Control|24, D-Command, D-Control, D-Fi, D-fx, D-Show, D-Verb, DAE, Digi 002, DigiBase, DigiDelivery, Digidesign, Digidesign Audio Engine, Digidesign Intelligent Noise Reduction, Digidesign TDM Bus, DigiDrive, DigiRack, DigiTest, DigiTranslator, DINR, DV Toolkit, EditPack, Eleven, EUCON, HD Core, HD Process, Hybrid, Impact, Interplay, LoFi, M-Audio, MachineControl, Maxim, Mbox, MediaComposer, MIDI I/O, MIX, MultiShell, Nitris, OMF, OMF Interchange, PRE, ProControl, Pro Tools M-Powered, Pro Tools, Pro Tools|HD, Pro Tools LE, QuickPunch, Recti-Fi, Reel Tape, Reso, Reverb One, ReVibe, RTAS, Sibelius, Smack!, SoundReplacer, Sound Designer II, Strike, Structure, SYNC HD, SYNC I/O, Synchronic, TL Aggro, TL AutoPan, TL Drum Rehab, TL Everyphase, TL Fauxlдер, TL In Tune, TL MasterMeter, TL Metro, TL Space, TL Utilities, Transfuser, Trillium Lane Labs, Vari-Fi Velvet, X-Form, and XMON are trademarks or registered trademarks of Avid Technology, Inc. Xpand! is Registered in the U.S. Patent and Trademark Office. All other trademarks are the property of their respective owners.

Product features, specifications, system requirements, and availability are subject to change without notice.

Guide Part Number 9320-65015-00 REV B 11/10

Documentation Feedback

At Avid, we are always looking for ways to improve our documentation. If you have comments, corrections, or suggestions regarding our documentation, email us at techpubs@avid.com.

contents

Chapter 1. Introduction	1
HD OMNI Features	1
What's Included	2
System Requirements and Compatibility	2
Registration	2
About This Guide	3
About www.avid.com	4
Chapter 2. HD OMNI Overview	5
HD OMNI Front Panel	5
HD OMNI Back Panel	11
Chapter 3. Connecting HD OMNI	17
Pro Tools HD Systems	18
Pro Tools HD Native Systems	20
Example Studio Connections	22
Chapter 4. Configuring HD OMNI in Pro Tools	25
Pro Tools Hardware Setup	25
Pro Tools I/O Setup	39

Chapter 5. SETUP Mode	45
SETUP Mode Options	45
Analog Output (OUTLVL)	46
Analog Output Trim (OUTRIM)	46
TRS Output Mirrors (TRSOUT)	47
Fold Down (FOLDWN)	47
Analog Line Input Reference Level (IN REF)	48
Limiter (LIMITR)	48
Internal Sample Rate (SRATE)	49
Clock Source (CLOCK)	49
Digital 1–2 Input Source (DIG1–2)	50
Sample Rate Conversion (SRC1–2)	51
SPL Display Calibration (SPLCAL)	51
Fan Control (FAN)	53
Firmware Version (VER)	53
Factory Reset (RESET)	54
Display Contrast (CNTRST)	54
Appendix A. Pinout Diagrams for the DB-25 Connectors	55
Analog Output DB-25	55
AES/EBU DB-25	55
Appendix B. Sound Pressure Level Display Calibration	57
Appendix C. Compliance Information	59
Environmental Compliance	59
EMC (Electromagnetic Compliance)	60
Safety Compliance	61
Index	63

chapter 1

Introduction

HD OMNI is a professional digital audio interface designed for use with Pro Tools|HD and Pro Tools|HD Native systems. HD OMNI provides a compact preamp, input mixer, monitoring, and I/O solution for music production and recording, and post production studios.

HD OMNI Features

Analog I/O

- 24-bit analog-to-digital (A/D) and digital-to-analog (D/A) converters, with support for sample rates up to 192 kHz
- 2 high-quality Mic/DI preamps (Channels 1–2)
- 2 combined XLR and 1/4-inch TRS front panel inputs for microphone and instrument level input
- 2 XLR back panel microphone inputs
- 2 1/4-inch TRS Send and 2 1/4-inch TRS Return back panel jacks for hardware inserts on channels 1 and 2
- 4 analog TRS line level back panel inputs (Channels 1–4)

⚠ *HD OMNI provides multiple analog input connections, but only provides up to four channels of simultaneous analog input for Pro Tools.*

- Soft Clip and Curv limiting circuits to protect against clipping on analog input
- 8 channels of analog back panel output using a DB-25 breakout cable (sold separately) with variable output gain
- 2 channels of analog back panel output using TRS (Mirrors channels 1–2 or 7–8 on DB-25 connector)
- Front panel stereo 1/4-inch headphone jack

Digital I/O

- 8 channels of AES/EBU output (up to 192 kHz Single Wire) using a DB-25 breakout cable (sold separately)
- 2 channels of AES/EBU XLR input (up to 192 kHz Single Wire)
- 2 channels of S/PDIF RCA input and output (up to 192 kHz)
- 8 channels of ADAT TOSLINK input and output
- Support for ADAT S/MUX Optical for sample rates of 88.2 kHz, 96 kHz, 176.4 kHz, and 192 kHz
- Support for two channels of S/PDIF Optical with sample rates of up to 96 kHz
- Real-time sample rate conversion (SRC) on Digital Inputs 1–2 of either AES/EBU, S/PDIF, or Optical (S/PDIF)

⚠ *SRC is not supported with ADAT S/MUX.*

Monitoring

- An additional stereo “CUE” output path in Pro Tools® for headphone monitoring from the front panel headphone jack
- Front panel Control Room (MAIN/ALT) and Headphone monitoring volume control
- Flexible monitoring with fold-down from all stereo and surround formats (up to 7.1 surround)
- Input mixer for low latency direct monitoring of a variety of incoming signals (configured in the Pro Tools Hardware Setup)

Synchronization

- Loop Sync input and output for connecting additional Pro Tools|HD interfaces and peripherals
- External Clock input and output for synchronizing HD OMNI with external Word Clock devices

What's Included

- HD OMNI audio interface
- AC power cable
- DigiLink to DigiLink Mini adapter cable
- BNC cable (18 inches [0.46m])
- *HD OMNI Guide*
- *Health and Safety Guide*
- Registration Information Card

System Requirements and Compatibility

HD OMNI requires a qualified Pro Tools|HD or Pro Tools|HD Native system. Pro Tools HD supports only one HD OMNI per system.

Avid can only assure compatibility and provide support for hardware and software it has tested and approved.

For complete system requirements and a list of qualified computers, operating systems, hard drives, and third-party devices, visit:

www.avid.com/compatibility

Registration

Review the enclosed Registration Information Card and follow the instructions on it to quickly register your purchase online. By registering, you become eligible to receive the following:

- Technical support information
- Software update and upgrade notices
- Hardware warranty information

About This Guide

This guide provides a basic overview of the HD OMNI features and functionality.

For hardware installation instructions for your Pro Tools|HD system, see the *Pro Tools|HD User Guide*.

For hardware installation instructions for your Pro Tools|HD Native system, see the *Pro Tools|HD Native User Guide*.

For Pro Tools installation instructions, see the *Pro Tools Installation Guide*.

For additional information about using Pro Tools software, see the *Pro Tools Reference Guide* (in Pro Tools, choose Help > Pro Tools Reference Guide).


Conventions Used in This Guide


All of our guides use the following conventions to indicate menu choices and key commands:


Convention	Action
File > Save	Choose Save from the File menu
Control+N	Hold down the Control key and press the N key
Control-click	Hold down the Control key and click the mouse button
Right-click	Click with the right mouse button


The names of Commands, Options, and Settings that appear on-screen are in a different font.

The following symbols are used to highlight important information:

 *User Tips are helpful hints for getting the most from your system.*

 *Important Notices include information that could affect your data or the performance of your system.*

 *Shortcuts show you useful keyboard or mouse shortcuts.*

 *Cross References point to related sections in this guide and other Pro Tools guides.*

About www.avid.com

The Avid website (www.avid.com) is your best online source for information to help you get the most out of your Pro Tools system. The following are just a few of the services and features available.

Product Registration Register your purchase online.

Support and Downloads Contact Avid Customer Success (technical support); download software updates and the latest online manuals; browse the Compatibility documents for system requirements; search the online Knowledge Base or join the worldwide Pro Tools community on the User Conference.

Training and Education Study on your own using courses available online or find out how you can learn in a classroom setting at a certified Pro Tools training center.


Products and Developers Learn about Avid products; download demo software or learn about our Development Partners and their plugins, applications, and hardware.

News and Events Get the latest news from Avid or sign up for a Pro Tools demo.

chapter 2

HD OMNI Overview

This chapter provides an overview of the front and back panel features of HD OMNI.

 See the *Pro Tools|HD User Guide* for hardware installation instructions for Pro Tools|HD systems. See the *Pro Tools|HD Native User Guide* for hardware installation instructions for Pro Tools|HD Native systems. For system additional system configuration information, see the *Pro Tools Reference Guide*.

HD OMNI Front Panel



HD OMNI Front Panel

Power Switch and LED Ring

This button turns HD OMNI on and off.

When powering on HD OMNI, the LED ring around the power button lights green, flashes amber, and then turns back to green.

The LED ring is amber when the unit has power, unless Pro Tools is running. The LED lights green only when Pro Tools is running.

⚠ *When power cycling HD OMNI, wait at least 15 seconds before turning HD OMNI on again after turning it off. Failure to do so may result in losing the current Preamp Gain Levels and other settings.*

CH1 and CH2 Inputs

The front panel Channel 1 (CH1) and Channel 2 (CH2) Inputs provide combined XLR and 1/4-inch TRS inputs for microphone and instrument level input. Use XLR for microphone connections and use 1/4-inch for instrument connections.

Preamp Controls

The front panel Channel 1 and 2 inputs provide high-quality Microphone and Instrument level preamps. These two preamp channels can be linked so that changing any parameter on either channel causes an identical change to the other preamp channel (this is useful for stereo sources). When unlinked, the parameters for each preamp can be set independently.



CH 1 and CH 2 MIC/LINE/DI Inputs, and Preamp controls

Input Type Lets you select MIC, LINE, or INST for input on Channels 1 and 2. The corresponding LED lights to indicate which option is selected.

When MIC is selected, the back panel MICROPHONE inputs are used for channel 1 and 2 input, unless an XLR cable is connected to the front panel CH1 or CH2 inputs, then the front panel connection is used. Remove the XLR cable from the front panel connector to regain use of the rear panel MIC connection.

When LINE is selected, the back panel LINE IN 1 and 2 1/4-inch TRS inputs are used.

When INST is selected, the front panel 1/4-inch TRS inputs are used.

When Link 1 & 2 is disabled, the Input Type can be independently enabled (or disabled) on Channels 1 and 2 by pressing the PREAMP Encoder to select the desired channel.

⚠ *When the Input Type is set to LINE, the PREAMP is bypassed. Also, the preamps for the MIC/INST inputs do not change level when LINE is selected, so you can easily revert back to MIC or INST input.*

PAD Enables (or disables) a -20 dB pad for both Channel 1 and Channel 2 inputs. The PAD button LED lights when the pad is enabled.

When Link 1 & 2 is disabled, PAD can be independently enabled (or disabled) on Channels 1 and 2 by pressing the PREAMP Encoder to select the desired channel.

💡 *When using the INST input with some instruments (such as a guitar or bass), you may want to engage the Pad to avoid clipping on input.*

48V Enables (or disables) 48V phantom power for the Channel 1 and Channel 2 XLR inputs. The 48V button LED lights when the phantom power is enabled. You can manually enable or disable the 48V option only when the Input Type is set to MIC. When switching to another Input Type (such as LINE), phantom power continues to be supplied to the MIC channel.

When Link 1 & 2 is disabled, 48V can be independently enabled (or disabled) on Channels 1 and 2 by pressing the PREAMP Encoder to select the desired channel.

⚠ *Inserting or removing an XLR cable to or from the front panel inputs automatically disables phantom power (if it is on).*

High Pass Filter Enables (or disables) a 12 dB/octave high-pass filter with a roll-off starting at 85 Hz for the Channel 1 and Channel 2 inputs. The High Pass Filter button LED lights when the high-pass filter is enabled. This option is not available when the Input Type is set to LINE.

When Link 1 & 2 is disabled, the High Pass Filter can be independently enabled (or disabled) on Channels 1 and 2 by pressing the PREAMP Encoder to select the desired channel.

Phase Invert Inverts the phase for the Channel 1 and Channel 2 front panel inputs. The Phase Invert button LED lights when this option is enabled.

When Link 1 & 2 is disabled, Phase Invert can be independently enabled (or disabled) on Channels 1 and 2 by pressing the PREAMP Encoder to select the desired channel.

PREAMP Display Shows the gain value (+10 to +65 dB).

When Link 1 & 2 is disabled, gain boost or attenuation for either Channel 1 (P1) or Channel 2 (P2) can be independently adjusted by pressing the PREAMP Encoder to select the desired channel.

PREAMP Encoder Lets you adjust the input gain for MIC and INST inputs (by rotating the encoder), and toggle front panel controls between the two preamp channels (by pressing). Press the encoder to toggle between P1 and P2 (Channel and Channel 2). Turn the encoder clockwise to increase and counterclockwise to decrease the input gain for the selected channel (from +10 to +65 dB). Gain can be adjusted in 1 dB increments.

LINK 1 & 2 Links (or unlinks) controls for the Channel 1 and Channel 2 front panel inputs. The Link 1 & 2 button LED lights when this option is enabled. If the two channels are linked, when levels between channels 1 and 2 are different, the difference is maintained when changed the levels until an upper or lower limit (+10 or +65) is reached. When the upper or lower limit is reached by one of the channels, you can continue to adjust the level of the other channel until the limit is reached, but the difference between the two channels is no longer maintained.

INSERT Enables (or disables) the returns for any hardware inserts connected to the back panel Channel 1 and Channel 2 input and output pairs. Note that the sends are always active.

When Link 1 & 2 is disabled, INSERT can be independently enabled (or disabled) on Channels 1 and 2 by pressing the PREAMP Encoder to select the desired channel.

Preamp Signal Path

The Channel 1 and Channel 2 front panel inputs use the following signal path:

Input Signal > Pad > Preamp > HPF > Insert > Limiter > ADC > Phase Invert

Synchronization and Sample Rate LEDs



Synchronization and Sample Rate LEDs

Sync Mode LEDs


The SYNC MODE LEDs indicate the current Clock Source as set in the Pro Tools Hardware Setup (see “Pro Tools Hardware Setup” on page 25) or on HD OMNI in SETUP mode (see “Clock Source (CLOCK)” on page 49).


INT (Internal) Indicates the HD OMNI sample clock is generated by its internal crystal oscillator, as determined by the session Sample Rate.

EXT (External) Indicates that the HD OMNI is either using the EXT CLOCK IN port or a digital source for system synchronization.

When synchronized to Word Clock, External Clock input and output do not have to be at the Word clock rate. At 44.1 kHz and 48 kHz, EXT CLOCK IN synchronization will be 1x the current session sample rate. However, for sample rates higher than 48 kHz, HD OMNI generates a choice of 1x, 2x, or 4x of a base rate of 44.1 kHz or 48 kHz, as follows:

Session Sample Rate	Word Clock Support
44.1 kHz	44.1 kHz
48 kHz	48 kHz
88.2 kHz	88.2 kHz 44.1 kHz
96 kHz	96 kHz 48 kHz
176.4 kHz	176.4 kHz 44.1 kHz
192 kHz	192 kHz 48 kHz

 *The Word Clock base rate can only be set in the Pro Tools Hardware Setup.*

 *If the EXT LED flashes on and off, HD OMNI does not have external sync. Check to make sure that HD OMNI is receiving synchronization from the correct clock source.*

LOOP Indicates that the HD OMNI is slaving to another Pro Tools|HD audio interface using Loop Sync.

MST (Loop Master) Indicates which Pro Tools audio interface is the master Pro Tools peripheral. The Loop Master LED will be continuously lit on the current Loop Master peripheral only, and unlit on all other peripherals. (Only one Pro Tools audio interface can be Loop Master at a time.) The Loop Master LED will always be lit with a single interface.


For Pro Tools|HD systems, Loop Master defaults to the first Pro Tools audio interface connected to the primary, or “core” Pro Tools|HD card.

Sample Rate LEDs

These LEDs display the current sample rate of the HD OMNI internal crystal oscillator: 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz, or 192 kHz. The sample rate can be set in Pro Tools when you create a new session, or in the Hardware Setup (see “Pro Tools Hardware Setup” on page 25) or Playback Engine dialogs if no session is open. You can also set the Sample Rate in SETUP mode if Pro Tools is not running (see “Internal Sample Rate (SRATE)” on page 49).

METERS

These five-segment LEDs indicate signal level for either the input or output channels 1–8. These meters are calibrated at –42 dB, –18 dB, –12 dB, –6 dB, and 0 dB, respectively. The 0 dB LED segment lights red if clipping occurs at the Input or Output depending on whether IN or OUT is selected.

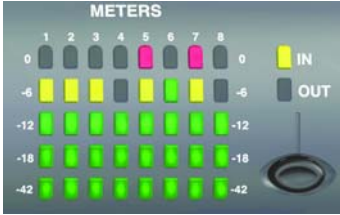

Input/Output Meters

⚠ *The front panel METERS only display the eight analog/digital Input or Output channels assigned in the Pro Tools Hardware Setup. Unassigned channels are not displayed on the front panel METERS. The output METERS only show signal level from Pro Tools output channels. They do not display signal levels for direct monitoring.*

IN/OUT Button Toggles whether the Meters show the signal levels for either the Input or the Output channels.

IN LED Indicates that the Meters are showing the signal levels for the Input channels assigned in the Pro Tools Hardware Setup.

OUT LED Indicates that the Meters are showing the signal levels for the Output channels assigned in the Pro Tools Hardware Setup.

💡 *A signal that meters at 0 on the HD OMNI will not necessarily clip; use the on-screen meters in Pro Tools to determine whether a signal is clipping.*

MONITOR Controls

HD OMNI provides onboard monitoring from mono up to 7.1 surround. Use the front panel MONITOR controls to select the monitoring path and adjust monitoring levels. You can configure the following monitoring options:

- Control Room Outputs (MAIN and ALT as configured in Pro Tools)
- MUTE, ALT, and CUE to Headphones
- Headphone Output
- SETUP



Monitor controls and Headphone jack


📖 *For more information on configuring monitoring with HD OMNI in Pro Tools, see “Monitor” on page 29.*


SETUP Enables (or exits) Setup mode. The SETUP button LED is lit when in Setup mode (for more information about Setup mode, see Chapter 5, “SETUP Mode”).

CUE Enables (or disables) a dedicated stereo Cue mix from Pro Tools that is sent to the headphones. The CUE button LED lights when enabled. When CUE is disabled, the headphones monitor the same mix as the Control Room outputs (see also “CUE 1–2” on page 42).

ALT Toggles the Control Room output paths between MAIN and ALT. The LED is lit when the Control Room output is assigned to ALT, and it is off when the Control Room output is assigned to MAIN. You can also press and hold the ALT button to engage ALT Trim mode (see “Analog Output Trim (OUTRIM)” on page 46).

MUTE Mutes (or unmutes) the MAIN or ALT Control Room outputs only, whichever is active. The LED lights when MUTE is enabled.

 *When power cycling HD OMNI, MUTE is temporarily engaged automatically to protect the monitor outputs for the Control Room monitor paths declared in Pro Tools.*

 *The MUTE button does not affect the Headphone output.*

MONITOR Encoder Lets you select and adjust the output levels for the MAIN, ALT, and headphone outputs. You can also use the Monitor encoder to enter Trim values in ALT Trim mode and to navigate Setup mode. Press the encoder to switch between Control Room (CR) and Headphone mode (HP).

In Setup mode, press the encoder to select and confirm settings. For more information on Setup mode, see Chapter 5, “SETUP Mode.”

MONITOR Display Shows which output level is being controlled and the value for that parameter:

- “CR” = Control Room level (either MAIN or ALT)
- “HP” = Headphone level


HEADPHONE Jack

HD OMNI provides a single stereo 1/4-inch headphone jack on the front panel. The output to the headphone jack can either mirror the stereo channels of the selected Control Room monitoring path or the dedicated CUE 1–2 output from Pro Tools (see “CUE 1–2” on page 42).

Use the MONITOR Encoder to control the Headphone level (see “MONITOR Controls” on page 9).

The HD OMNI Headphone output also lets you monitor greater than stereo format sessions, in two different ways: passing the Left and Right channels only, or folding down from the greater-than-stereo format to stereo. For example, with a 5.1 monitor format, if fold down is not enabled, only the Left and Right channels will be heard in the headphones. However, with fold down enabled, all channels will be folded down to stereo for headphone monitoring.

You can configure multichannel monitoring and enable (or disable) fold down or headphone monitoring in the Pro Tools Hardware Setup dialog (for more information, see “Monitor” on page 29).

 *The HD OMNI Headphone output is set to power 600 Ohm headphones at +3 dBV.*

HD OMNI Back Panel

The HD OMNI has the following back panel features:



HD OMNI Back Panel

Analog Inputs

HD OMNI provides up to four channels of simultaneous analog inputs to Pro Tools using 24-bit A/D converters that support sample rates up to 192 kHz. Channels 1 and 2 can be from the front panel inputs (XLR microphone or 1/4-inch TRS Instrument), from the back panel MICROPHONE (XLR) 1 and 2 Inputs, or from the back panel LINE IN (1/4-inch TRS) 1 and 2 Inputs. Channels 3 and 4 are always from the back panel LINE IN 3 and 4 Inputs.



Back panel analog inputs

MICROPHONE 1 and 2 Inputs

HD OMNI provides two microphone inputs (XLR) on the back panel. These two inputs are routed through the preamps, which can be controlled from the front panel.

MICROPHONE 1 and 2 can be used for input when the Input Type is set to MIC on the front panel. If the Input Type is set to MIC on the front panel, and a microphone connection is made on the front panel Channel 1 or 2 inputs, the corresponding back panel input is bypassed.

SEND and RTN 1 and 2

HD OMNI provides two discrete hardware sends and returns. The selected inputs (MIC, LINE, or INST) on Channels 1 and 2 can be routed through the hardware sends and returns available on the back panel. This lets you use your favorite outboard gear (such as compressors or EQs) at the signal input stage, after the pad, pre-amp, and high-pass filter, but before the Soft Clip or Curv limiter circuits and the analog-to-digital converter.

Send and Return 1 inserts on Channel 1 and Send and Return 2 inserts on Channel 2. Select (or deselect) INSERT on the front panel to enable (or disable) the hardware inserts. Note that the sends are always active.

LINE IN 1-4

HD OMNI provides four line level 1/4-inch TRS inputs. LINE IN 1 and 2 can only be used for input when the Input Type is set to LINE on the front panel.

Analog Outputs




Back panel analog TRS outputs, and analog and digital (AES/EBU) DB-25 outputs

TRS OUT 1 and 2

HD OMNI provides two 1/4-inch TRS Outputs for monitoring either ANALOG OUT 1 and 2 or ANALOG OUT 7 and 8 (or neither). This can be set in Pro Tools on the Analog Out tab of the Hardware Setup dialog (see “Analog Out” on page 28) or on HD OMNI in SETUP mode (see “TRS Output Mirrors (TRSOUT)” on page 47)

ANALOG OUT 1–8

HD OMNI provides a DB-25 connector for eight channels of analog audio output. These balanced outputs operate at +10 dBu (Speaker level) or at +24 dBu (Line level). You can set the output level in Pro Tools on the Analog Out page of the Hardware Setup dialog (see “Analog Out” on page 28).

 For a pinout diagram for the analog DB-25 connector, see Appendix A, “Pinout Diagrams for the DB-25 Connectors.”


Digital Inputs and Outputs



Back panel digital inputs and outputs

AES EBU OUT 1–8

HD OMNI provides one DB–25 connector for eight channels of AES/EBU output. Each of the paired channels is a balanced three-conductor signal, and supports 192 kHz sample rates in Single Wire mode.


 For a pinout diagram for the AES/EBU DB-25 connector, see Appendix A, “Pinout Diagrams for the DB-25 Connectors.”

AES/EBU INPUT

HD OMNI provides a single stereo AES/EBU (XLR) input. The AES/EBU Input supports sample rates up to 192 kHz using AES Single Wire.

S/PDIF IN and OUT (Coaxial)

HD OMNI provides RCA jacks for stereo S/PDIF digital data stream input and output. S/PDIF supports up to 24-bit audio, at sample rates up to 192 kHz.

 To maintain data integrity and minimize jitter, use only 75-ohm coaxial cable for S/PDIF connections.

OPTICAL IN and OUT (1 and 2)

HD OMNI provides two sets of eight-channel Optical (TOSLINK) input and output. The Optical I/O on HD OMNI supports up to 24-bit audio, at sample rates up to 192 kHz. The number of available Optical input and output channels varies with sample rate as described below:

ADAT Optical

At sample rates of 44.1 kHz and 48 kHz, Optical Port A provides eight channels of audio input and output. Optical Port B is unused for input, but on output it mirrors Optical Port A (channels 1–8).

S/MUX 2

At sample rates of 88.2 kHz and 96 kHz (S/MUX 2), each Optical port provides four channels of audio. Optical In and Out 1 send and receive channels 1–4, and Optical In and Out 2 send and receive channels 5–8.

S/MUX 4

At sample rates of 176.4 kHz and 192 kHz (S/MUX 4), each Optical port provides two channels of audio. Optical In and Out 1 send and receive channels 1 and 2, and Optical In and Out 2 send and receive channels 3 and 4.

⚠ *When using S/MUX, only the first optical port can be used to synchronize to external clock.*

Optical (S/PDIF)

Either set of Optical I/O ports can also be used for two-channel Optical S/PDIF input and output with support for sample rates up to 96 kHz. HD OMNI can receive two channels of Optical S/PDIF when operating at sample rates of 176.4

and 192kHz, but sample rate conversion (SRC) is automatically enabled for this feature. The Optical (S/PDIF) option can be selected in the Pro Tools Hardware Setup dialog.

About Lightpipe-Compatible Devices

Lightpipe is an industry standard, eight-channel optical digital audio connection created by Alesis. Lightpipe is found on many devices, including Optical (ADAT) decks, modular digital multitracks (MDMs), sound cards, A/D or D/A converters, and digital mixing consoles.

DigiLink Mini Ports



PRIMARY PORT

Use the PRIMARY PORT to connect HD OMNI to your Pro Tools|HD system using a DigiLink Mini cable with a DigiLink Mini to DigiLink adapter cable (included), or to your Pro Tools|HD Native system using the DigiLink Mini cable (included with your Pro Tools|HD Native system).

The PRIMARY PORT can send and receive up to 32 channels to and from a Pro Tools|HD card. Channels 17–32 (if active) are passed through to the EXPANSION PORT. However, note that HD OMNI only provides up to eight channels of input and output.

When using HD OMNI in a system with multiple interfaces, it will provide eight channels of input and output on Pro Tools channels 1–8 or 17–24 depending on whether or not HD OMNI is connected directly to a Pro Tools|HD card, or whether it is connected to the Expansion port of another Pro Tools|HD peripheral (such as an HD I/O).

EXPANSION PORT

The EXPANSION PORT lets you connect an additional Pro Tools|HD audio interface to HD OMNI. The EXPANSION PORT passes input and output channels 17–32 to the expansion (or secondary) audio interface.

This port is only available when HD OMNI is connected to a Pro Tools|HD or Pro Tools|HD Native card (it is not available when the HD I/O is connected to the Expansion Port on another audio interface).

DigiLink Mini Cable Length Specifications

There are six different lengths of DigiLink Mini cables:

- 18" (0.46m), included with each interface
- 12' (3.6m)
- 25' (7.62m)
- 50' (15.25m), the maximum length supported for 192 kHz sessions (sold separately)
- 100' (30.5m), the maximum length supported for 96 kHz sessions (sold separately)

DigiLink to DigiLink Mini Adapter Cables

Use DigiLink to DigiLink Mini adapter cables to connect HD OMNI to Pro Tools|HD cards. You can also use DigiLink to DigiLink Mini adapter cables to connect older HD peripherals (such as 192 I/O) to the EXPANSION PORT of HD OMNI.

There are two types of DigiLink to DigiLink Mini adapter cables:

- 12" (0.3 m) DigiLink female to DigiLink Mini male, included with each interface
- 12" (0.3 m) DigiLink Mini female to DigiLink male

💡 *For more information about DigiLink Mini and DigiLink Mini to DigiLink cables, visit the Avid website (www.avid.com).*

Clock and Synchronization Ports



Back panel Word Clock and Loop Sync In and Out

WD CLK IN and OUT

The Word Clock I/O ports are standard BNC connectors that receive and output word clock signal. These ports can be used to synchronize HD OMNI with any word clock-capable device.

Word Clock In can be selected as the Clock Source from the front panel or in the Hardware Setup dialog in Pro Tools. Word Clock Out can be configured in the Hardware Setup dialog using the External Clock Output selector.

💡 *Because crucial timing data is passed through the Loop Sync and Word Clock ports, you should use high-quality, 75-ohm RG-59 cables for making connections.*

LOOP SYNC In and Out

Loop Sync is a dedicated clock loop for synchronizing multiple Pro Tools|HD peripherals together (multiple audio interfaces, and/or a SYNC HD™ or SYNC I/O™ and one or more audio interfaces). Loop Sync uses a word clock signal based on sample rates of either 44.1 kHz or 48 kHz. As sample rate increases in the system, Loop Sync continues to operate at a base rate of 44.1 kHz or 48 kHz, depending upon the higher rate.

The Loop Sync In and Out ports are standard BNC connectors that output a 1x Word clock signal. Loop Sync should only be used to chain multiple Pro Tools|HD peripherals together (audio interfaces and SYNC HD or SYNC I/O).

AC Power


This connector accepts a standard AC power cable (included). HD OMNI is auto power-selecting (100V to 240V) and will automatically work with a standard modular cable (IEC) to connect to AC power outlets in any country.

chapter 3


Connecting HD OMNI

HD OMNI provides up to eight channels of analog and digital I/O, a compact preamp, input mixer, monitoring, and I/O solution for Pro Tools|HD and Pro Tools|HD Native systems.

Pro Tools|HD With Pro Tools|HD systems, HD OMNI is connected to a Pro Tools|HD card using a DigiLink Mini to DigiLink cable. You can add additional Pro Tools|HD audio interfaces to your Pro Tools|HD system using the Expansion port on the back of HD OMNI or using additional Pro Tools|HD cards. See “Pro Tools|HD Systems” on page 18.

 *For more information about installing Pro Tools|HD cards, see the Pro Tools|HD User Guide.*

Pro Tools|HD Native With Pro Tools|HD Native systems, HD OMNI is connected to the Native card using a DigiLink Mini cable. See “Pro Tools|HD Native Systems” on page 20.

 *For more information about installing a Pro Tools|HD Native card, see the Pro Tools|HD Native User Guide.*

Studio Connections

HD OMNI can be integrated with your other equipment in several ways, depending on your needs. For examples, see “Example Studio Connections” on page 22.

Rack Mounting HD Audio Interfaces

HD OMNI and all Pro Tools|HD audio interfaces need room at their sides to maintain proper air flow for cooling. Do not block the sides of the unit or disconnect the internal fan. If the units are rack-mounted in a case, remove the case lids or doors before operating the system. Failure to do so can result in the units overheating very quickly, which can permanently damage sensitive components.

Pro Tools|HD Systems

To connect HD OMNI to a Pro Tools|HD system, do one of the following:

- Connect HD OMNI Primary Port to the DigiLink Port on the Pro Tools|HD Accel Core card with a DigiLink Mini to DigiLink cable (included with your Pro Tools|HD system).

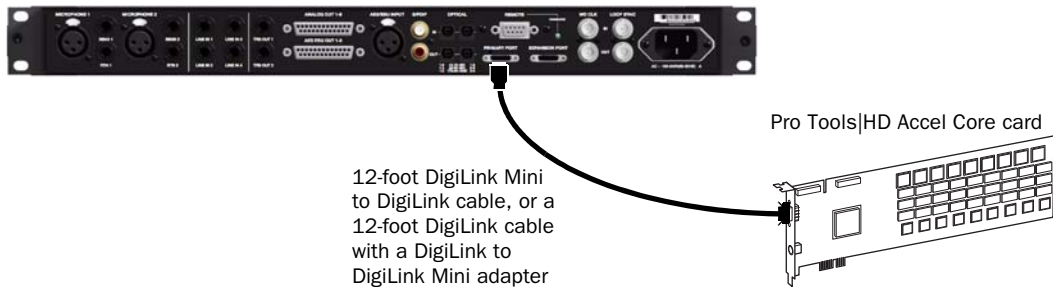


Figure 1. HD OMNI connected to the DigiLink Port on a Pro Tools|HD Accel Core card (8-channel system)

To connect additional Pro Tools|HD Audio Interfaces to a Pro Tools|HD system:

- 1 Connect the Primary Port of the first HD audio interface to the DigiLink Port on the Pro Tools|HD Accel Core card with a DigiLink Mini to DigiLink cable (included with your Pro Tools|HD system).
- 2 Do one of the following:
 - Connect the Primary Port of the second HD audio interface to the Expansion Port on the first HD audio interface with the included 18-inch DigiLink Mini cable.
 - or –
 - Connect the Primary Port of the second HD audio interface to a Pro Tools|HD Accel card with a DigiLink Mini to DigiLink cable (included with your Pro Tools|HD system).
- 3 Connect additional HD audio interfaces to additional Pro Tools|HD Accel cards.
- 4 Make the necessary Loop Sync connections.

⚠ Pro Tools HD supports only one HD OMNI per system.

Connecting Loop Sync

If you are using two (or more) Pro Tools audio interfaces or a SYNC peripheral, Loop Sync must be connected to maintain proper clock among the devices. For an example of connecting multiple Pro Tools|HD audio interfaces, see Figure 2 below.

To make Loop Sync connections:

- 1 Connect (daisy-chain) the Loop Sync Out of each interface to the Loop Sync In of the next interface with the BNC cables included with your audio interface.
- 2 Connect the Loop Sync Out of the last interface to the Loop Sync In of the primary interface or SYNC peripheral.

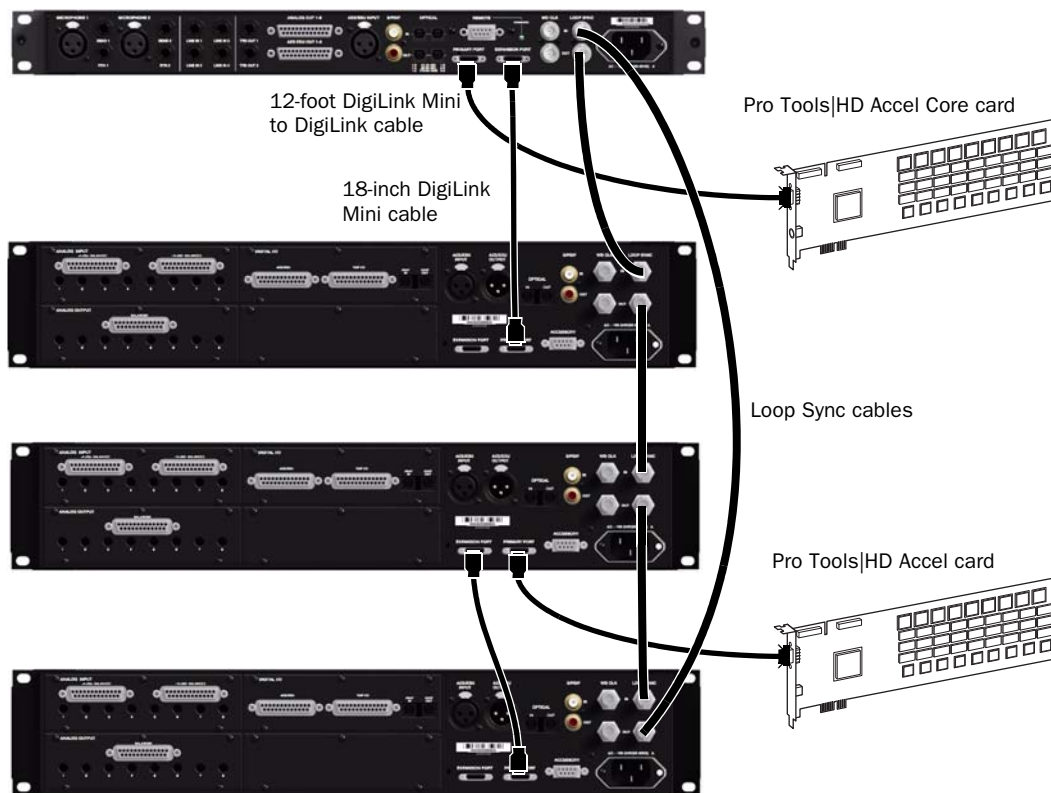


Figure 2. HD OMNI connected to the DigiLink Port on a Pro Tools|HD Accel Core card and HD I/O connected to the DigiLink Mini Expansion port on HD OMNI. A second HD I/O is connected to the DigiLink Port on a Pro Tools|HD Accel card with a third HD I/O connected to the Expansion port on the second HD I/O. Loop Sync (BNC) cables connect the HD OMNI and all three HD I/Os.

Pro Tools|HD Native Systems

You can use up to eight channels of analog and digital I/O with HD OMNI connected to a Pro Tools|HD Native card using a DigiLink Mini cable.

To connect HD OMNI to a Pro Tools|HD Native card, do one of the following:

- Connect HD OMNI Primary Port to DigiLink Mini Port 1 on the Pro Tools|HD Native card with a DigiLink Mini cable (included with your Pro Tools|HD Native system).
– or –
- Connect HD OMNI Primary Port to the Expansion port on a primary Pro Tools|HD audio interface with a DigiLink Mini cable (HD I/O).



Figure 3. HD OMNI connected to the DigiLink Mini Port 1 on a Pro Tools|HD Native card (8-channel system)

To connect multiple HD audio interfaces to a Pro Tools|HD Native system:

- 1** Connect the Primary Port of the first HD audio interface to the DigiLink Mini Port 1 on the Pro Tools|HD Native card with the included DigiLink Mini cable.
- 2** Do one of the following:
 - Connect the Primary Port of the second HD audio interface to the Expansion Port on the first HD audio interface with the included 18-inch DigiLink Mini cable.
 - or –
 - Connect the Primary Port of the second HD audio interface to the DigiLink Mini Port 2 on the Pro Tools|HD Native card with the included DigiLink Mini cable.
- 3** Make the necessary Loop Sync connections.

⚠ *Pro Tools HD supports only one HD OMNI per system.*

Connecting Loop Sync

If you are using two (or more) Pro Tools audio interfaces or a SYNC peripheral, Loop Sync must be connected to maintain proper clock among the devices. For an example of multiple audio interfaces, see Figure 2 below. (For examples that include a SYNC peripheral, see the *SYNC HD Guide*.)

To make Loop Sync connections:

- 1 Connect the Loop Sync Out of each interface to the Loop Sync In of the next interface with BNC cables (included with each audio interface).
- 2 Connect the Loop Sync Out of the last interface to the Loop Sync In of the primary interface.

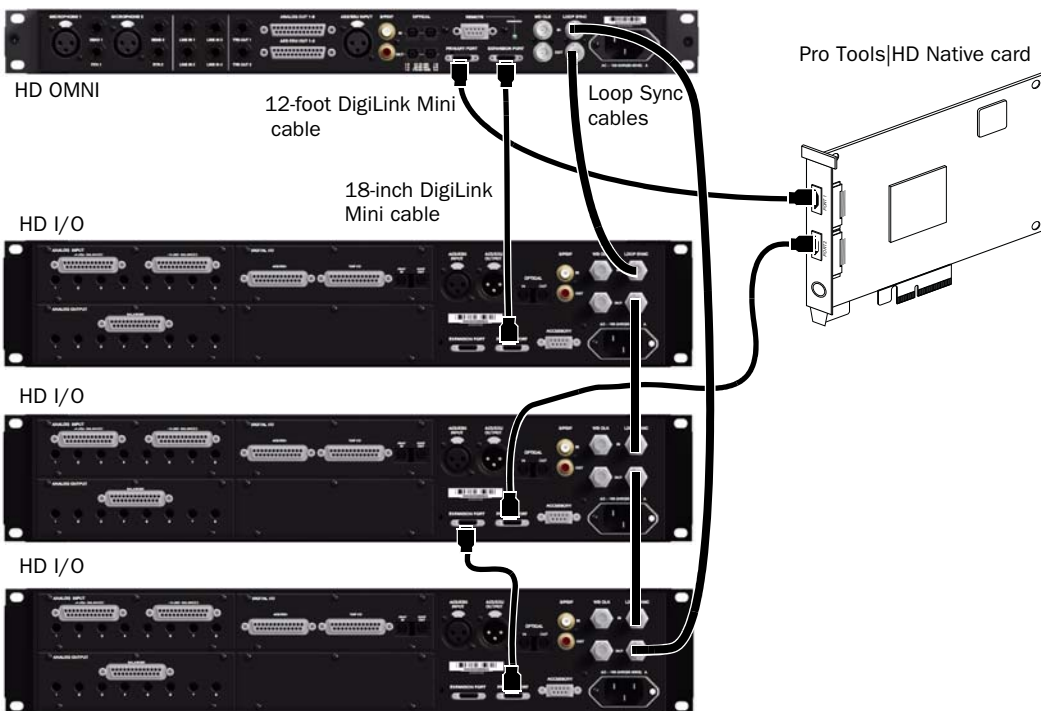



Figure 4. HD OMNI connected to the DigiLink Mini Port 1 on a Pro Tools|HD Native card, with an HD I/O connected to its Expansion port. A second HD I/O is connected to the DigiLink Mini Port 2 on a Pro Tools|HD Native card, with a third HD I/O connected to its Expansion port. Loop Sync (BNC) cables connect the HD OMNI and all three HD I/Os.

Example Studio Connections

Figure 5 on page 22 and Figure 6 on page 23 illustrate possible studio setups without a mixer, where microphones, instruments, hardware inserts, and monitoring equipment are connected directly to HD OMNI. Note that the line level inputs are only available on the back panel.

 *HD OMNI provides DB-25 breakout connectors for analog and AES/EBU output. Avid sells several different DigiSnake DB-25 cables for these purposes. For more information, contact your dealer or visit the Avid Store online at our website (www.avid.com).*

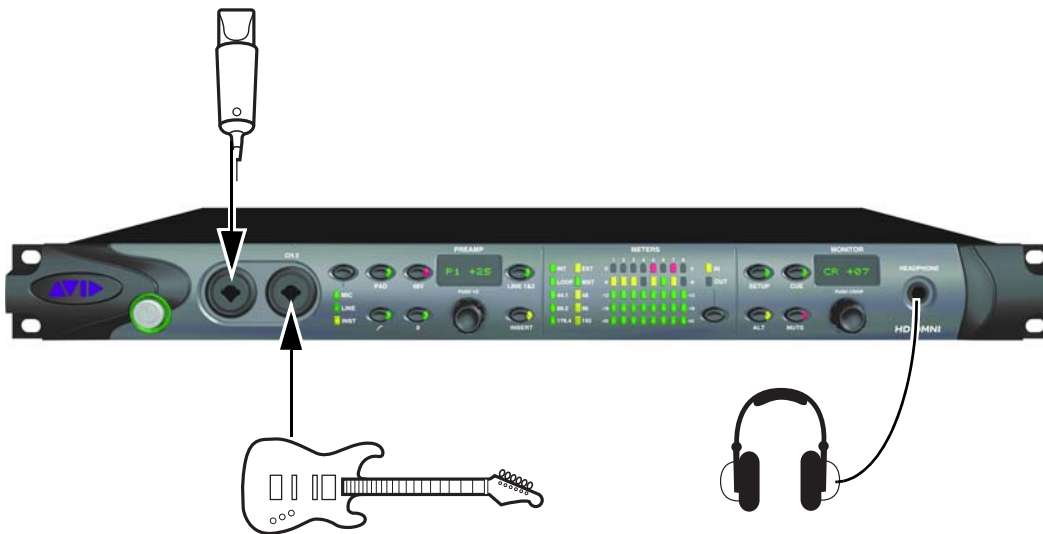


Figure 5. Example studio configuration using HD OMNI, front panel connections shown

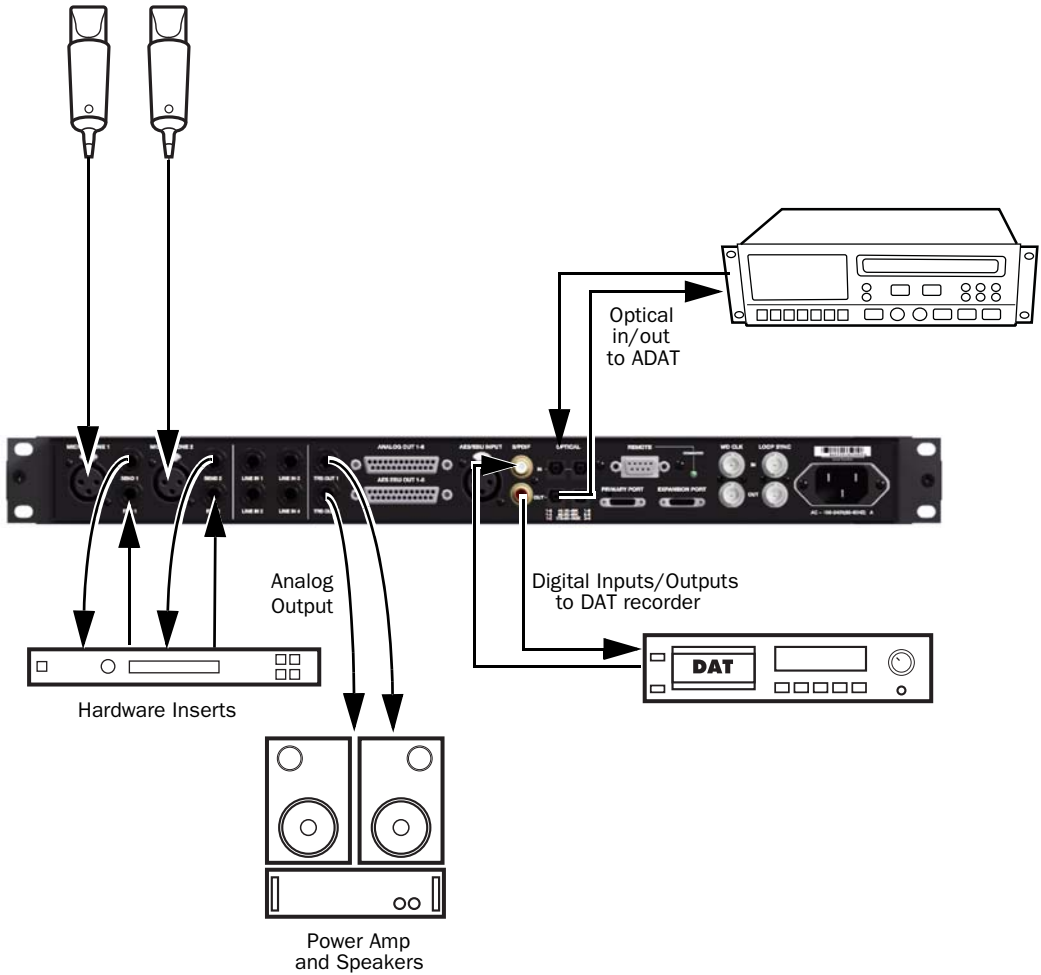


Figure 6. Example studio configuration using HD OMNI, back panel connections shown

chapter 4

Configuring HD OMNI in Pro Tools

This chapter explains how to configure Pro Tools for use with HD OMNI.



You can validate the successful installation of HD OMNI in your Pro Tools system simply by playing back and recording audio in Pro Tools. This can be accomplished without having to adjust Hardware and I/O settings in Pro Tools. In most cases, the default settings work well for stereo sessions.



For more information about configuring Pro Tools, see the Pro Tools Reference Guide.

Pro Tools Hardware Setup

The Pro Tools Hardware Setup dialog lets you configure HD OMNI for use with Pro Tools. It also lets you configure some of the same settings as in Setup mode on HD OMNI (see Chapter 5, “SETUP Mode”).


In addition to the standard Main, Analog In, and Analog Out tabs, the Hardware Setup dialog provides the Monitor and Mixer tabs that are unique to HD OMNI. Note that all HD OMNI specific hardware settings (except labels) are stored in HD OMNI itself.

To configure HD OMNI in Pro Tools:

- 1 Choose Setup > Hardware.
- 2 From the Peripherals list, select the HD OMNI audio interface.
- 3 Click the Monitor tab and configure the options (see “Monitor” on page 29).
▲ *Because the Monitor configuration affects the available Output paths, be sure to configure the Monitor page before configuring the other pages in the Hardware Setup and the I/O Setup.*
- 4 Click the Main tab and configure the options (see “Main” on page 26).
- 5 Click the Analog In tab and configure the options (see “Analog In” on page 28).
- 6 Click the Analog Out tab and configure the options (see “Analog Out” on page 28).
- 7 Click the Mixer tab and configure the options (see “Mixer” on page 37).
- 8 Continue by configuring any other HD audio interfaces connected to your system.
- 9 When you are finished, click OK.

Main

The Main page of the Hardware Setup dialog is where you define which physical inputs and outputs on your audio interface are routed to available inputs and outputs in Pro Tools. You can think of this window as a patchbay that lets you route any of the inputs or outputs on your Pro Tools HD audio interfaces to channel assignments in the Pro Tools mixer.

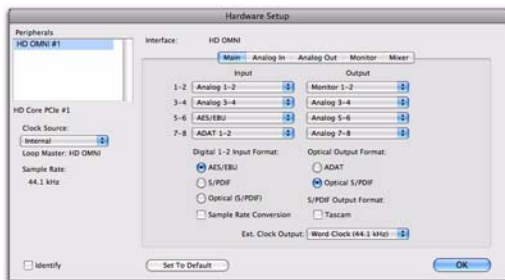

Hardware Setup, Main page

Clock Source Selects the appropriate clock source for the system. In most cases, you can simply use Internal. The other options are for resolving Pro Tools to external clock sources.

Depending on the selected Digital 1–2 Input Format, Clock Source options include: Internal, AES/EBU, S/PDIF, Optical (S/PDIF), ADAT 1–8 (at 44.1 kHz and 48 kHz), ADAT S/MUX 1–8 (at 88.2 kHz and 96 kHz), ADAT S/MUX 1–4 (at 176.4 kHz and 192 kHz), and Word Clock (multiple Word Clock rates are available when operating at higher sample rates).

Sample Rate Determines the default sample rate when you create a new session. This setting is available only when there is no session open. Otherwise, the current session sample rate is displayed, but cannot be changed.

Input Selects the physical inputs (such as Analog 1–2 or ADAT 1–2), that will be routed to the corresponding Pro Tools input channels (such as Ch 1–2 or Ch 3–4), listed on the left side of the Main page.

Output Selects the physical outputs (such as Analog 1–2, Analog 3–4, AES/EBU 1–2, and so on), used for the corresponding Pro Tools output channels (listed on the left side of the Main page).

The available Output options update to reflect the configuration of the Monitor page of the Hardware Setup (see “Monitor” on page 29).

Mono and stereo Monitor paths are always automatically assigned to the first Output selector (Pro Tools channel outputs 1–2) and cannot be changed. Larger Monitor path formats similarly use subsequent Outputs as needed (depending on the channel width of the Monitor path).

Physical outputs (such as “Analog 1–2”) are unavailable when they are assigned to Monitor (but Pro Tools output channels assigned to “Monitor” sound through the corresponding physical outputs).

⚠ *The HD OMNI Mute button and Monitor encoder (used for adjusting the Control Room monitoring path levels) only apply to assigned monitor paths and do not have any effect on other outputs. Physical outputs not assigned to Monitor output paths in the Main tab of the Hardware Setup can send signal at high levels from Pro Tools, even if the front panel Mute button is enabled or if the Monitor level is attenuated. This can potentially cause speaker damage, so be careful to manage audio output from Pro Tools with this in mind.*

Digital 1–2 Input Format Selects the digital input format for channels 1 and 2:

- AES/EBU
- S/PDIF
- Optical (S/PDIF)—resets the Optical I/O port (which is, by default, eight channels of ADAT I/O) to two channels of S/PDIF Optical I/O

Optical Output Format Selects the digital output format for the Optical output:

- ADAT—Provides eight channels of ADAT optical output at 44.1 and 48 kHz.
- ADAT S/MUX—Provides eight channels of ADAT S/MUX optical output at 88.2 and 96 kHz, and four channels of ADAT S/MUX optical output at 176.4 and 192 kHz.
- Optical (S/PDIF)—Provides two channels of S/PDIF optical output at sample rates up to 96 kHz.

Sample Rate Conversion Enables (or disables) real-time sample rate conversion for the selected Digital 1–2 Input Format. When enabled, if the sample rate of the digital input source differs from the Pro Tools session sample rate, HD OMNI converts the incoming sample rate to the session sample rate in real time.



If the session sample rate is higher than 96 kHz and Digital 1–2 Input Format is set to Optical (S/PDIF), the Sample Rate Conversion option is automatically enabled (since Optical S/PDIF only supports sample rates up to 96 kHz).




Sample rate conversion increases latency by a variable amount depending on the difference between sample rates.

S/PDIF Output Format For S/PDIF compatibility with Tascam DA-30 DAT recorders, select the Tascam option under S/PDIF Output Format.

Ext. Clock Output Selects the appropriate output from the Ext. Clock Output pop-up menu to send clock output to other devices attached to HD OMNI. The available Ext. Clock Output options vary depending on the sample rate.

Analog In

The Analog In page of the Hardware Setup dialog lets you set the Reference Level for the physical analog inputs on HD OMNI. You can also apply a limiter to each of the four analog inputs.

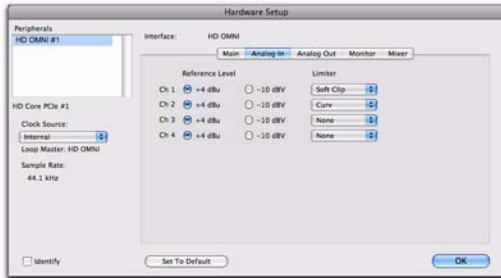

Hardware Setup, Analog In page

Reference Level

Select the appropriate Reference Level for each of the four analog input channels. Input operating levels are switchable between +4 dBu and -10 dBV operation.

Limiter

HD OMNI provides options for limiting on each of the four input channels. Select an option from the corresponding Limiter pop-up menu:


None Applies no limiting to the incoming analog signal.

Soft Clip Attenuates the incoming analog signal, providing extra protection from temporary clipping transients that can cause digital distortion when they exceed the maximum input of the unit. With Soft Clip enabled, HD OMNI supports an additional 4 dB of headroom by rounding off the top 4 dB to the clip point. This is useful for eliminating stray transients.

Curve Attenuates the incoming analog signal using a soft knee limiter circuit. This guarantees super soft limiting without becoming hard, even with large overloads on input.

Analog Out

The Analog Out page of the Hardware Setup dialog lets you set the Output Level for the physical analog outputs on HD OMNI. You can also select which channels are mirrored on the back panel TRS Outputs.

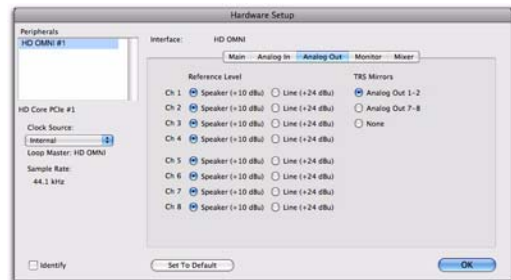

Hardware Setup, Analog Out page

Output Level

Select the appropriate Output Level for each of the eight analog output channels. HD OMNI provides two options for output levels:

Speaker (+10 dBu) Select this option for output channels connected directly to powered monitors.

Line (+24 dBu) Select this option for output channels connected to line-level devices (such as an analog mixing console).

TRS Mirrors

The TRS OUT 1 and 2 jacks on the back panel of HD OMNI can mirror the analog signal output of channels 1–2 or 7–8. Select the appropriate option depending on your monitoring configuration:


Analog 1–2 Select this option if you want to monitor analog output channels 1–2 through TRS OUT 1 and 2.

Analog 7–8 Select this option if you want to monitor analog output channels 7–8 through TRS OUT 1 and 2.

None Select this option if you do not intend to use TRS OUT 1 and 2 for monitoring.

Monitor

The Monitor page of the Hardware Setup dialog is a virtual patchbay where you can define which physical outputs are used for the MAIN and ALT monitoring paths. You can assign dedicated monitoring paths to any of the available Analog 1–8, AES/EBU 1–8, or stereo digital outputs.

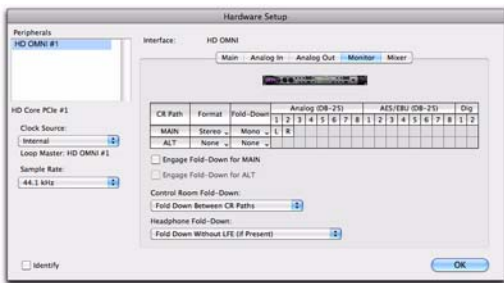

Hardware Setup, Monitor page

Changes to the Monitor page are reflected in the Output options on the Main page in the Hardware Setup dialog, the Output and Bus pages of the I/O Setup dialog, and in the Output path names for tracks in your Pro Tools session. Because of this, you should always configure the Monitor page first, before configuring the other pages of the Hardware Setup and the I/O Setup.

⚠ *With HD OMNI, Delay Compensation is not supported on assigned Monitor outputs. Delay Compensation is only supported on physical outputs not assigned to a Monitor path.*

MAIN and ALT Control Room Paths


HD OMNI provides two possible Control Room monitoring paths (CR Path): MAIN and ALT. Each of these monitoring paths can be set to None (not used), or to channel formats ranging from Mono to 7.1.

When configuring MAIN and ALT Control Room monitoring paths, the path with the widest channel format determines the channel format of the “Monitor” Output path that appears both in the Output page of the I/O Setup and in the Main page of the Hardware Setup. All Output paths used by the Control Room monitoring path (MAIN and ALT) are otherwise unavailable.

From Pro Tools, track outputs that are routed to “Monitor” will play out either the MAIN Control Room path or the ALT Control Room path depending on the state of the ALT button on the front panel of HD OMNI. The MAIN Control Room path is used for monitoring when the ALT button is disengaged on the front panel of HD OMNI (the LED is *not* lit). The ALT Control Room Path is used for monitoring when the ALT button is engaged on the front panel of HD OMNI (the LED is lit).

To assign the MAIN and ALT Control Room paths:

- 1 In Pro Tools, open the Hardware Setup dialog (Setup > Hardware Setup) and select the Monitor tab.
- 2 Select the channel format from the Format selector for the Control Room Path you want to create.
- 3 Place the mouse cursor over the Channel Matrix (the cursor appears as a pencil), and click to assign Control Room Path monitoring channels to physical output channels on HD OMNI. These appear as Output channels for Pro Tools tracks.

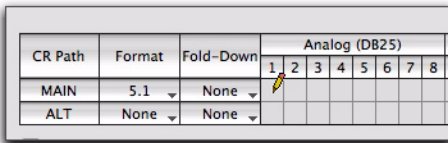

CR Path	Format	Fold-Down	Analog (DB25)								
			1	2	3	4	5	6	7	8	
MAIN	5.1	None	✓	✓							
ALT	None	None					✓	✓			

Assigning Control Room Path monitoring channels to HD OMNI physical outputs

- 4 If desired, select the Fold Down channel format from the Fold Down selector.
- 5 Enable or disable the Fold Down options (see “Fold Down Options” on page 35).
- 6 Click OK to save your changes and close the Hardware Setup dialog.

The Monitor settings are saved on HD OMNI and apply regardless of whether or not Pro Tools is running.

To reassign the MAIN and ALT Control Room paths:

- Click the current Control Room Path monitoring channel on the cross-point matrix and drag it to the new location for the physical output channel assignment you want.

Monitor Path Assignments Reserve Stereo Physical Output Pairs

Regardless of the Monitor Format (channel width), the Monitor path always reserves stereo pairs of physical outputs even if the Monitor path is not using both channels of a given stereo pair. Additionally, the Monitor path is always labeled in consecutive pairs starting with 1–2 regardless of which physical outputs the different Monitor channels are assigned to.


For example, if you assign a stereo Monitor path to Analog (DB25) outputs 1 and 5 (see 1. below), the physical outputs Analog 1–2 and 5–6 are reserved for the Monitor path, even though Output channels 2 and 6 are not being used.

Additionally, in the Main page of the Hardware Setup, “Monitor 1–2” is automatically selected for the first Output. Analog 1–2 and Analog 5–6 appear in subsequent Output selectors as “Analog 1–2 (Monitor)” and “Analog 5–6 (Monitor)” and are greyed out and unavailable since they are reserved for the Monitor path (see 2. below).

Similarly, in the Output page of the I/O Setup (see 3. below), “Monitor 1–2” is automatically selected for the first Output. Analog 1–2 and Analog 5–6 appear in subsequent Output selectors as “Analog 1–2 (Monitor)” and “Analog 5–6 (Monitor)” and are greyed out and unavailable since they are reserved for the Monitor path

1.

CR Path	Format	Fold-Down	Analog (DB-25)									
			1	2	3	4	5	6	7	8		
MAIN	Stereo	Mono	L					R				
ALT	None	None										

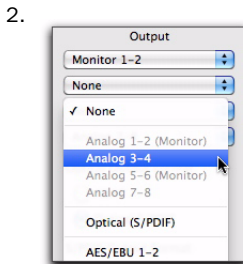

3.

		HD OMNI #1					
Name	Format	Monitor 1-2	None 7-2	No 2	None		
Monitor	✓ Monitor	Mon	L	R			
A 3-4	✓ Stereo		L	R		Analog 1-2 (Monitor)	
A 5-6	✓ Stereo		L			Analog 3-4	
A 7-8	✓ Stereo					Analog 5-6 (Monitor)	
A 9-10	✓ Stereo					Analog 7-8	
						Optical (S/PDIF)	

Stereo Monitor path assigned to Analog 1 and 5 as it appears in the Hardware Setup (1 & 2) and in the I/O Setup (3)

CR Path Channel Matrix

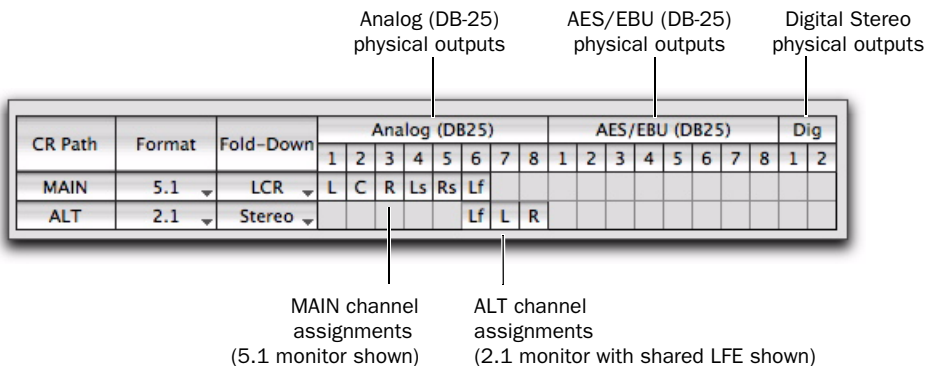


Figure 7. CR Path MAIN and ALT channel assignments

CR Path

The Control Room Path (CR Path) channel matrix provides monitoring channel assignment rows for the MAIN and ALT CR Path.

Format

The MAIN and ALT CR Path Format selectors let you select from the following channel formats:

- None (the monitoring path is disabled)
- Mono
- Stereo
- 2.1 (stereo plus an Lf channel)
- LCR
- LCRS
- Quad
- 5.0
- 5.1
- 6.0
- 6.1
- 7.0
- 7.1

A Note About Odd Number Formats

Since the Output channels for HD OMNI are in stereo pairs, any time you assign an odd numbered Format (such as mono, LCR, or 5.0), all stereo pairs carrying those channel assignments are used for the Monitor path and are unavailable as direct physical outputs in both the Hardware Setup and I/O Setup. For example, if you assign an LCR Monitoring path to Output channels 1–2 and 3 in the Monitor page of the Hardware Setup (see 1. below), channel 4 also becomes unavailable in the Main page of the Hardware Setup and in the Output page of the I/O Setup (see 2. below).


- | CR Path | Format | Fold-Down | Analog (DB-25) | | | | | | | | | | |
|---------|--------|-----------|----------------|---|---|---|---|---|---|---|--|--|--|
| | | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | | | |
| MAIN | LCR | Mono | L | C | R | | | | | | | | |
| ALT | None | None | | | | | | | | | | | |
- | Name | Format | Monitor | Monitor | Analog | An... | Que |
|---------|---------|---------|---------|--------|-------|-----|
| | | 1-2 | 3-4 | 5-6 | 7-8 | 1-2 |
| Monitor | Monitor | | | | | |
| A 3-4 | Stereo | | L R | | | |
| A 5-6 | Stereo | | | L R | | |
| A 7-8 | Stereo | | | | L R | |
| A 9-10 | Stereo | | | | | L R |



LCR Monitor path in Hardware Setup and I/O Setup

A Note About the 2.1 Format

When using the 2.1 monitoring format, Pro Tools sends only two output channels (stereo) to HD OMNI. The LFE channel, or .1 channel, is synthesized on the HD OMNI rather than being a separate Lf channel from Pro Tools. Consequently, when using a 2.1 monitoring format, one stereo pair of Output channels will be used for the Monitor path, and an additional stereo pair will be greyed out and unavailable as it is reserved for the Lf channel on HD OMNI. This is also reflected in the Output page of the I/O Setup.

For example, if the 2.1 format is assigned to Analog output channels 1–3 in the Monitor Page of the Hardware Setup (see 1. below), in the Main Page of the Hardware Setup (see 2. below) and in the Output page of the I/O Setup (see 3. below), Analog 1–2 are assigned to “Monitor” and Analog 3–4 are made inactive since channel 3 is reserved for the Lf channel.

1. 

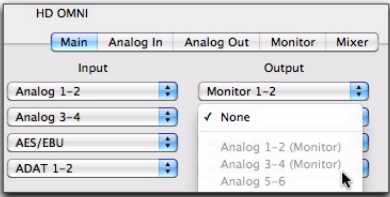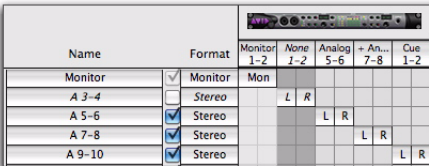CR Path	Format	Fold-Down	Analog (DB-25)										
			1	2	3	4	5	6	7	8			
MAIN	2.1	Mono	L	R	LF								
ALT	None	None											
2. 
3. 

Name	Format	Monitor	None	Analog	+ An...	Cue
		1-2	1-2	5-6	7-8	1-2
Monitor	Monitor	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
A 3-4	Stereo	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
A 5-6	Stereo	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
A 7-8	Stereo	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
A 9-10	Stereo	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

2.1 Monitor path in Hardware Setup and I/O Setup

Fold Down

The MAIN and ALT monitoring path Fold Down selectors let you select any channel format that is narrower than the channel format selected for the corresponding CR Path. For example, if the MAIN CR Path Format is set to 5.1, it can fold down to 5.0 or lower channel formats. When folding down, all channels of the source are automatically, intelligently mixed down to the lower channel format so that all source channels are heard on the monitoring path.

When Fold Down is engaged for a CR Path, the CR Path Format is “folded down” to the selected Fold Down channel format. When Fold Down is *not* engaged for a CR Path, monitoring is maintained at the selected Format (channel format). When any Fold Down is set for a CR Path, the option to engage Fold Down for that CR Path becomes available. For more information, see “Fold Down Options” on page 35.

⚠ *Folding down loud mixes can cause clipping in certain circumstances. HD OMNI fold down algorithms follow common industry standards, such as summing to mono from larger formats. If you encounter clipping on fold down, you may want to reduce the overall gain of your mix.*

CR Path Channel Assignments to Physical Outputs

The CR Path channel assignments are created and edited just like in the Pro Tools I/O Setup (for more information about I/O Setup, see the *Pro Tools Reference Guide*).

The number of CR Path channels depends on the selected Format (channel format). For example, when the CR Path format is set to 5.1, the CR Path consists of 6 channels: L (front left), C (center), R (front right), Ls (left surround), Rs (right surround), and LFE (Low Frequency Effects). A 5.1 CR Path can be assigned to any 6 available physical outputs. In Figure 7 on page 32, the MAIN CR Path is 5.1 and each channel is assigned to the physical outputs of Analog (DB-25) channels 1–6.

Uneven channel formats make the next even numbered channel unavailable. This is because output channel paths are always paired. For example, LCR occupies output channels 1–2 and 3–4 (with 4 unavailable), and 5.0 occupies output channels 1–2, 3–4, and 5–6 (with 6 unavailable).

Once CR Path channels are assigned to physical outputs, the “Monitor” path is displayed in the Output selectors on the Main page of the Hardware Setup and in the I/O Setup. The individual physical outputs used by the MAIN and ALT Control Room monitor assignments are italicized in the I/O Setup, indicating they are in use and unavailable for other output assignments.

CR Path	Format	Fold-Down	Analog (DB-25)										
			1	2	3	4	5	6	7	8			
MAIN	LCR	Mono	L	C	R								
ALT	None	None											

Interface:		HD OMNI	
Main Analog In Analog Out Monitor Mixer			
Input		Output	
1-2	Analog 1-2	Monitor 1-2	
3-4	Analog 3-4	Monitor 3-4	
5-6	ADAT 1-2	Analog 5-6	
7-8	ADAT 3-4	Analog 7-8	

Name	Format	Monitor											
		1-2	3-4	5-6	7-8	9-10	11-12	13-14	15-16				
Monitor	Monitor												
A 3-4	Stereo												
A 5-6	Stereo												
A 7-8	Stereo												
A 9-10	Stereo												

LCR monitoring determines the available Hardware Setup Output assignments, and I/O Setup Output path assignments

⚠ At sample rates higher than 96 kHz, the Optical S/PDIF Digital output is grayed out and unavailable as a monitoring path in the Hardware Setup.


Note that any signal routed to the “Monitor” path from Pro Tools tracks plays out the corresponding assigned physical output according to the MAIN and ALT assignments.


Monitor Output Level Selector

In addition to being able to set the Output Level for physical output in the Analog Out page, you can also set Output Levels without leaving the Monitor page.

To set the Output Level for a physical output channel in the Monitor page:

- Click the output channel number at the top of the CR Path Channel Matrix and select the Output Level:
 - Speaker (+10dBu)
 - or –
 - Line (+24dBu)

 *Option-click (Mac) or Alt-click (Windows) to set the Output Level for all channels.*

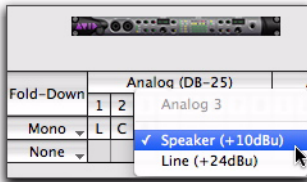

Selecting the Output Level for channel 3 of the Analog (DB-25) output in the Monitor page

Fold Down Options

HD OMNI provides intelligent *fold down* options for the MAIN and ALT Control Room, and headphone monitoring paths.

HD OMNI provides three types of fold down options:

Type 1 Fold down between formats of the same monitor path. For example, fold down the MAIN format to the specified Fold-Down format on the same monitor path.


Type 2 Fold down between the MAIN and ALT Control Room paths.

Type 3 Fold down options for headphone monitoring.

Fold down is a special type of submix from a multichannel source that keeps all channels audible with a monitoring path format of fewer channels. For example, when folding down from 5.1 to stereo, the Front Left and Surround Left channels fold down to the Left stereo channel, the Front Right and Surround Right channels fold down to the Right stereo channel, and the Center channel and the LFE channel are panned center between the Left and Right stereo channels. Note that some of the source channels will be automatically attenuated to balance correctly in the folded down mix.

When not folding down from a multichannel format to a format of fewer channels, any channels from the source that do not directly match the channels available in the monitoring path are not heard. For example, with a MAIN 5.1 Control Room path routed to a stereo ALT monitoring path without folding down, only the Front Left and Right channels from the source are heard, while the Surround Left and Right, and LFE channels are not heard.


HD OMNI provides several Fold Down options depending on the CR Path Format and Fold Down settings.

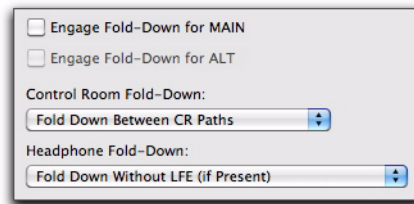

Monitor Fold Down options


Engage Fold-Down for Main

Enable the Engage Fold-Down for Main option (Type 1) to automatically fold down the MAIN CR Path from the selected Format (such as 5.1) to the selected Fold Down setting (such as Stereo).

 *Engage Fold-Down for MAIN can also be enabled from the front panel in SETUP mode (see Chapter 5, "SETUP Mode").*

Engage Fold-Down for ALT

Enable the Engage Fold-Down for ALT option (Type 1) to automatically fold down the ALT CR Path from the selected Format (such as Stereo) to the selected Fold Down setting (such as Mono).

 *Engage Fold-Down for ALT can also be enabled from the front panel in SETUP mode (see Chapter 5, "SETUP Mode").*

Control Room Fold-Down

The Control Room Fold-Down setting (Type 2) determines whether or not to fold-down between the MAIN and ALT CR Paths.

For example, if the MAIN CR Path Format is set to 5.1 and ALT is set to Stereo, and the Control Room Fold-Down setting is set to Fold-Down Between CR Paths, enabling ALT on the front panel of HD OMNI folds down the 5.1 MAIN CR Path to the Stereo ALT CR Path.

Fold Down Between CR Paths Select this option to fold-down from the CR Path with the larger Format setting (channel format) to the CR Path with the smaller Format setting, whether from MAIN to ALT or from ALT to MAIN.

For example, if MAIN is 5.1 and ALT is Stereo, MAIN will fold down to ALT. However, if MAIN is Mono and ALT is Stereo, ALT will fold down to MAIN.

Do Not Fold Down Between CR Paths Select this option to disable fold down between the MAIN and ALT CR Paths.

For example, if the MAIN Control Room monitor path is set to 5.1 and the ALT Control Room monitor path is set to Stereo, only the front Left and Right channels of the 5.1 source are heard in the ALT Stereo monitor output path and the other source channels are not.

Headphone Fold Down

The Headphone Fold-Down setting (Type 3) determines how the CR Path channels are folded down to stereo for headphone monitoring.

Fold Down If Control Room Is Larger Than Stereo Select this option to fold down any greater-than-stereo CR Path to stereo for headphone monitoring.

For example, if the MAIN CR Path Format is set to 5.1, those channels fold down to stereo for headphone monitoring.


Fold Down Without LFE (If Present) Select this option to fold down any greater-than-stereo CR Path to stereo for headphone monitoring, but not passing the LFE channel if present (such as with 5.1).

Do Not Fold Down (L/R Channels Only) Select this option to not fold down from a greater-than-stereo CR Path and only pass the Left and Right channels for headphone monitoring. All other channels are not heard on the headphone monitoring path.


Mixer

The Mixer page of the Hardware Setup dialog lets you configure HD OMNI to mix the signals coming from HD OMNI physical inputs to the current active Monitor paths (direct monitoring). This way you monitor any incoming signal whether or not it is routed through the Pro Tools mixer.

For example, you can configure the Mixer so that you can listen to a connected CD player through your studio monitors, without having to route it through a Pro Tools session.

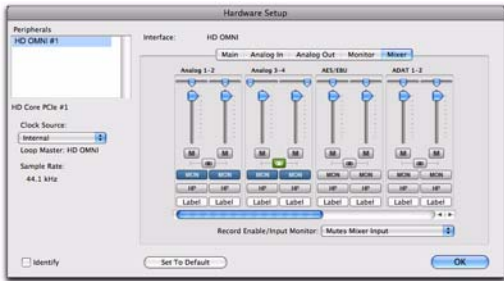


Hardware Setup, Mixer tab

 When you configure the Mixer settings in the Hardware Setup, the Mixer settings are stored on HD OMNI. This lets you use HD OMNI as a pre-configured standalone converter when Pro Tools is not running.

Mixer Channel Strips


The Mixer channel strips are grouped in pairs of physical outputs: Analog 1–2, Analog 3–4, AES/EBU, ADAT 1–2, and so on. Each channel strip provides the same controls.

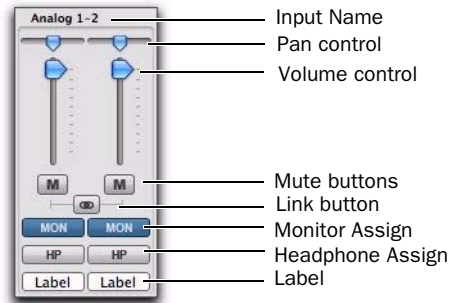


Hardware Setup, Mixer channel strip for Analog 1–2

Input Name Identifies the physical inputs. Any physical Inputs that are assigned to Input channels 1–8 on the Main page of the Hardware Setup appear **bold**. Inactive channels appear in *italics*.

Pan Control Pans the mono input signal in the stereo monitoring field. When the Monitor Path Channel format is greater-than-stereo (such as 5.1), the incoming signal is only panned between the Left and Right channels of the Monitor Path. When the Monitor Path Channel format is set to mono, stereo panning is automatically summed to mono.

 **Option-click (Mac) or Alt-click (Windows)** the Pan control to set it to the default center location. For linked stereo input pairs, **Command-Option-Control-click (Mac) or Control-Alt-Start-click (Windows)** to set the Pan controls hard left and hard right.

Volume Control Adjust the volume of the mono signal sent to any of the selected output assignments. The volume control only attenuates the incoming signal from 0 dB (unity) to -INF.


 *Option-click (Mac) or Alt-click (Windows) the Volume control to set it to the default unity setting.*

Mute Button Mutes (or unmutes) the input signal to all selected output assignments.

Link Button Links (or unlinks) the Volume, Mute, and output assignments between the pair of inputs for the channel strip. The Pan control cannot be linked.

Monitor Assign Selects (or deselects) the Monitor path as the output assignment. If no Monitor path is configured in the Monitor page of the Hardware Setup dialog, the Monitor output assignment is inactive.

Headphone Assign Selects (or deselects) the Headphone output (on the front panel of HD OMNI) as the output assignment.

 *Option-click (Mac) or Alt-click (Windows) any Mute, Link, Monitor Assign, or Headphone Assign button to select (or deselect) all buttons of the same type.*

Label Lets you enter a custom label for the physical input. This way you can create a descriptive label for the input to identify what is connected to it (such as “Mic 1,” “Guitar,” or “CD”). Note that labels are limited to six characters.

Record/Input Monitor Enable

The Record/Input Monitor Enable setting determines whether or not audio monitored through HD OMNI is muted when record or Input Monitor enabling a track in Pro Tools that shares the same physical input source. For example, if you have audio playing through Analog 1–2 using the HD OMNI Mixer, and you have a stereo track in Pro Tools that has Analog 1–2 set as the track input, when you record or Input Monitor enable the track, HD OMNI will either automatically mute the HD OMNI Mixer inputs or not.

Depending on the recording or monitoring situation, you may want to manually mute record/Input Monitor enabled tracks to monitor incoming audio using the HD OMNI Mixer (direct input monitoring channels), or you may want to have Pro Tools automatically mute the HD OMNI Mixer to monitor incoming audio through the Pro Tools mixer (this will inherit any Pro Tools mixer latency).




*Any physical Inputs that are assigned to Input channels 1–8 on the Main page of the Hardware Setup appear **bold**. Inactive channels appear in italics.*

Mutes Mixer Input Select this option to automatically mute the inputs to the HD OMNI Mixer when record or Input Monitor enabling a Pro Tools track that uses the same physical input source (such as Analog 1–2). Other physical input sources will continue to sound through the HD OMNI Mixer.

Ignore (Manually Manage Mutes) Select this option to never mute the physical inputs to the HD OMNI Mixer. You may want to select this option if you want to record into Pro Tools, but mute the record track and monitor the physical input source through the HD OMNI Mixer.

Pro Tools I/O Setup

This section describes how to configure input, output, bus, monitoring, cue, and other signal paths for HD OMNI in the Pro Tools I/O Setup.


 For more information the I/O Setup dialog, see the Pro Tools Reference Guide.

Opening the I/O Setup Dialog

The I/O Setup dialog can be opened from the application window (with a session closed), or from within a session (when a session is open).

To open the I/O Setup dialog:

- 1 Make sure HD OMNI is configured properly in the Hardware Setup dialog (see “Pro Tools Hardware Setup” on page 25).
- 2 Choose Setup > I/O.

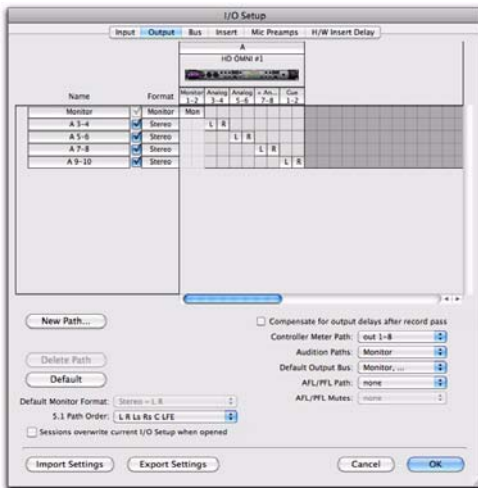

I/O Setup dialog (Output page with HD OMNI shown)

Closing the I/O Setup Dialog

To close the I/O Setup dialog and save changes:

- Click OK.


When you click OK, Pro Tools checks several settings for routing validity (to prevent feedback loops).

To close the I/O Setup dialog without saving changes:

- Click Cancel.

Input


The Input page of the I/O Setup lets you configure input signal path names, formats, and source channel (analog or digital). Multichannel input paths (stereo or greater) can have any number of sub-paths. You can have overlapping Input signal paths. Input names, channel formats, and physical input mappings are saved with the system.

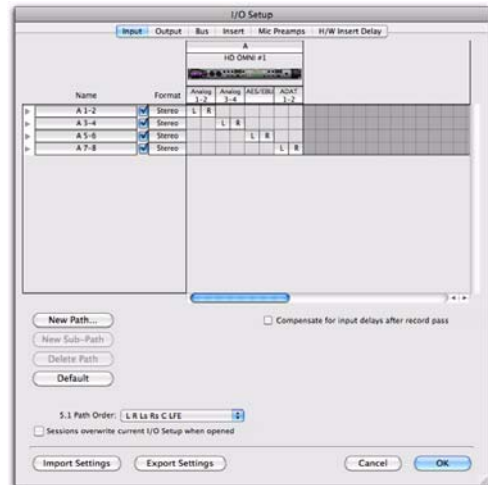

I/O Setup, Input page

To assign HD OMNI physical inputs to Pro Tools Input paths, do one of the following:

- On the Input page of the I/O Setup dialog (Setup > I/O), select the physical inputs from the Input selector.

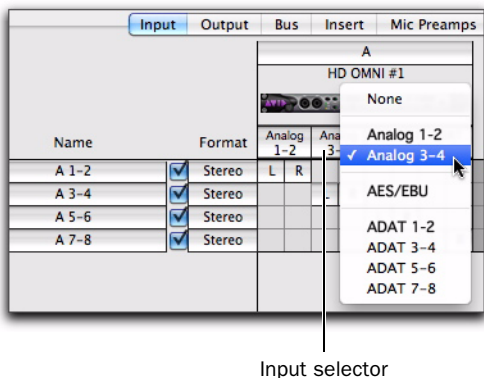

Input selector

Assigning Pro Tools Input channel paths to HD OMNI physical inputs in the I/O Setup


– Or –

- On the Main page of the Hardware Setup dialog (Setup > Hardware), select from the available physical inputs for each of the eight Input channels (see “Main” on page 26).

Output

The Output page of the I/O Setup for HD OMNI lets you configure output signal path names and formats. You can have overlapping Output paths. Output names, channel formats, and physical output mappings are saved with the system.

The Output page of the I/O Setup displays the MAIN and ALT HD OMNI monitoring paths as “Monitor” and also provides a dedicated Cue output path (to the Headphone jack on the front panel of HD OMNI).

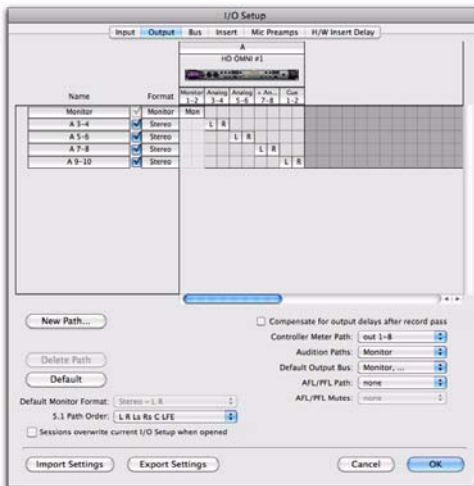


I/O Setup, Output page

Depending on whether or not monitoring paths are assigned in the Monitor page of the Hardware Setup dialog, not all physical outputs may be available from the Output selector in the Output page of the I/O setup. The selected physical output ports in the I/O Setup are linked to the eight channels of physical outputs selected for Output in the Main page of the Hardware Setup. If you change the setting on one dialog, it automatically updates in the other.

To assign HD OMNI physical outputs to Pro Tools Output paths, do one of the following:

- On the Output page of the I/O Setup dialog (Setup > I/O), select the physical outputs from the Output selector.

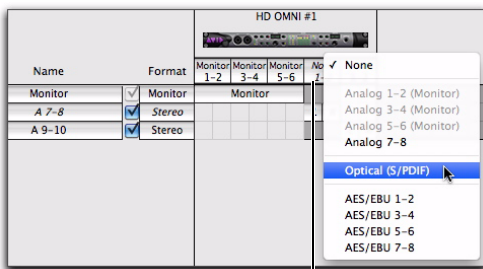

Input selector

Assigning Pro Tools Output channel paths to HD OMNI physical outputs in the I/O Setup

– or –

- On the Main page of the Hardware Setup dialog (Setup > Hardware), select from the available physical outputs for each of the eight Output channels (see “Main” on page 26).

HD OMNI with Monitoring

If you have configured a Monitoring path in the Monitor page of the Hardware Setup dialog, the physical outputs assigned to the MAIN and ALT Monitoring path are unavailable in the Main page of the Hardware Setup and in the I/O Setup.

The Monitoring path with the largest channel format is displayed in the I/O Setup. The Outputs are automatically assigned to the Monitor path in channel pairs from left to right. For example, for a 5.1 or a 5.0 monitor path, Outputs

1–6 are automatically assigned to Monitor 1–2, Monitor 3–4, and Monitor 5–6. In the Output Channel Mapping grid, the Monitor Path spans the entire range of output assignments.

		HD OMNI #1					
Name	Format	Monitor 1-2	Monitor 3-4	Monitor 5-6	Optical (S/P...)	Cue 1-2	
Monitor	Monitor	Monitor					
A 7-8	✓ Stereo				L R		
A 9-10	✓ Stereo					L R	

HD OMNI 5.1 Monitoring path shown in the Output page of the I/O Setup

Any of the remaining Output channels can be assigned to any of the remaining available physical outputs on HD OMNI. For example, with a 5.1 Main Monitor Path assigned to Analog Out 1–6 and a stereo ALT monitor path assigned to Analog Out 7–8, the Monitor Path in the Output page of the I/O Setup spans Output assignment 1–6. The remaining 7–8 Output can be assigned to any of the remaining available physical outputs, which in this case would be AES/EBU 1–8 (in pairs), ADAT 1–8 (in pairs), or S/PDIF.

HD OMNI without Monitoring

With no Monitor paths configured in the Monitor page of the Hardware Setup dialog, any unused physical output on HD OMNI can be selected for any the eight available Pro Tools output paths. The only exception is the additional CUE 1–2 output.

		HD OMNI #1					
Name	Format	Analog 1-2	Analog 3-4	Analog 5-6	Analog 7-8	Cue 1-2	
A 1-2	✓ Stereo	L R					
A 3-4	✓ Stereo		L R				
A 5-6	✓ Stereo			L R			
A 7-8	✓ Stereo				L R		
A 9-10	✓ Stereo					L R	

Pro Tools output paths assigned to physical outs on HD OMNI


CUE 1-2

The CUE 1-2 Output is a “hard-wired” stereo output to the Headphone jack on the front panel of HD OMNI. You can assign Pro Tools Output channels (left and right) to CUE 1-2 in the Output page in the I/O Setup. Use these Output channels (such as A 9-10) from Pro Tools track outputs or sends for a separate headphone mix. However, any audio sent to the CUE 1-2 Output only plays through the headphones when the CUE button is enabled on the front panel of HD OMNI. Otherwise, the headphone jack mirrors the selected Control Room Monitoring Path (MAIN or ALT), with or without fold down (depending on the CR Path Format and selected Fold Down options).

Bus

The Bus page lets you configure internal and output bus signal path names and formats, and map output busses to output paths (defined on the Output page). Multichannel busses (stereo or greater) can have any number of sub-paths. Output bus and internal mix bus names and channel formats are saved with the session.


Output bus paths to output channel mappings are automatically generated depending on the defined session output bus paths and the available system output channel paths.

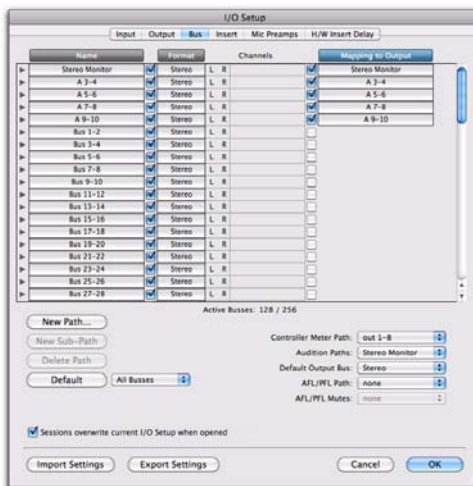

I/O Setup, Bus page

Insert

The Insert page of the I/O Setup lets you name Hardware Inserts that you may have connected to your Pro Tools audio interface. However, with HD OMNI, any channels that are used for monitoring are unavailable for hardware inserts.

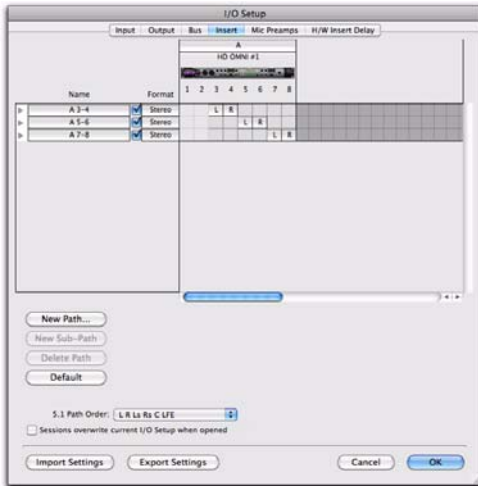

I/O Setup, Insert page

Mic Preamps

The Mic Preamps page of the I/O Setup is used for configuring hardware connections with a PRE (if present).

H/W Insert Delays

The H/W Insert Delays page of the I/O Setup is used for compensating for the delay (latency) of any Hardware Inserts.

chapter 5

SETUP Mode

SETUP mode provides direct access to many of the same controls as in the Pro Tools Hardware Setup dialog right from the front panel of HD OMNI. SETUP mode also provides controls for calibrating your system, adjusting the Display contrast, setting the Fan mode, and several other HD OMNI-specific settings.



Setup Mode and Monitor controls

To enter SETUP mode:

- Press the SETUP button on the front panel of HD OMNI so that the SETUP button LED is lit. Also, while in SETUP mode, text in the Display lights amber.

To exit SETUP mode:

- Press the SETUP button on the front panel of HD OMNI so that the SETUP button LED is *not* lit.

SETUP Mode Options

SETUP mode lets you configure the following options:

- Analog Output Level (“OUTLVL”)
- Analog Output Trim (“OUTTRIM”)
- TRS Output Mirrors (“TRSOUT”)
- Fold-Down (“FOLDWN”)
- Analog Line Input Reference Level (“IN REF”)
- Limiter (“LIMITR”)
- Internal Sample Rate (“SRATE”)
- Clock Source (“CLOCK”)
- Digital 1–2 Input Source (“DIG1–2”)
- Sample Rate Conversion (“SRC1–2”)
- SPL Display Calibration (“SPLCAL”)
- Fan Control (“FAN”)
- Firmware Version (“VER”)
- Factory Reset (“RESET”)
- Display Contrast (“CNRST”)

Analog Output (OUTLVL)

In SETUP mode, the Analog Output Level (OUTLVL) control lets you set the Output Gain Level for each of the eight available analog outputs.

⚠ *The Analog Output Gain Level control is unavailable in SETUP mode when the Hardware Setup dialog is open.*

To adjust between the Low Gain and High Gain Analog Output Level:

- 1 Enter SETUP mode. The SETUP LED lights green.
- 2 If necessary, turn the MONITOR encoder until the display shows “OUTLVL” (OUTLVL is the default control when first entering SETUP mode).
- 3 Press the MONITOR encoder button to select OUTLVL. The SETUP LED blinks on and off.
- 4 Turn MONITOR encoder until the display shows “OUT 1.”
- 5 Press the MONITOR encoder button to select OUT 1 (Analog Output channel 1).
- 6 Turn the MONITOR encoder to display either “SPEAKR” (+10 dBu) or “LINE” (+24 dBu).
- 7 Press the MONITOR encoder button to select the displayed Output. The display shows “OUT 1.”
- 8 Repeat preceding steps to set the Output Gain Level for Analog Outputs 2–8.
- 9 Press SETUP button to exit OUTLVL and return to top level of SETUP Options menu. The SETUP LED stops blinking and lights solid green.
- 10 Exit SETUP mode.

Analog Output Trim (OUTRIM)

In SETUP mode, the Analog Output Trim (OUTRIM) control lets you set the Analog Output Trim for each of the eight available analog outputs from –40 dB to +10 dB in 0.1 dB increments.


⚠ *The Analog Output Trim control is unavailable in SETUP mode when the Hardware Setup dialog is open.*

To adjust the Analog Output Trims:

- 1 Enter SETUP mode. The SETUP LED lights green.
- 2 Turn the MONITOR encoder until the display shows “OUTRIM.”
- 3 Press the MONITOR encoder button to select OUTRIM. The SETUP LED blinks on and off.
- 4 Turn MONITOR encoder until the display shows “OUT 1.”
- 5 Press the MONITOR encoder button to select OUT 1 (Analog Output channel 1).
- 6 Turn the MONITOR encoder to adjust the Analog Output Trim (from –40.0 dB to +10.0 dB in 0.1 dB increments) for the selected Output.
- 7 Press the MONITOR encoder button to select the displayed setting. The display shows “OUT 1.”
- 8 Repeat preceding steps to set the Analog Output Trim for Analog Outputs 2–8.
- 9 Press SETUP button to exit OUTRIM and return to top level of SETUP Options menu. The SETUP LED stops blinking and lights solid green.
- 10 Exit SETUP mode.

TRS Output Mirrors (TRSOUT)

In SETUP mode, the TRS Output Mirrors (TRSOUT) control lets you set whether the Analog TRS outputs on the back panel of HD OMNI mirror DB-25 Outputs 1–2 or DB-25 Outputs 7–8. This option can also be set to NONE, which results in no audio output from the Analog TRS Outputs.


 *The TRS Output Mirrors control is unavailable in SETUP mode when the Hardware Setup dialog is open.*

To select the TRS Output Mirrors option:

- 1 Enter SETUP mode. The SETUP LED lights green.
- 2 Turn the MONITOR encoder until the Monitor display reads “TRSOUT.”
- 3 Press the MONITOR encoder button. The SETUP LED blinks on and off, and the display shows the currently selected TRSOUT option.
- 4 Turn the MONITOR encoder to display an option:
 - OUT1–2
 - OUT7–8
 - NONE
- 5 Press the MONITOR encoder to select the displayed option. The display shows “TRSOUT.”
- 6 Press SETUP button to exit TRSOUT and return to top level of SETUP Options menu. The SETUP LED stops blinking and lights solid green.
- 7 Exit SETUP mode.

Fold Down (FOLDWN)

In SETUP mode, the Fold Down (FOLDWN) control lets you set whether Fold Down (as configured in the Hardware Setup in Pro Tools) is enabled or not for the MAIN and ALT Control Room paths. You can also set the Fold Down option for Headphone monitoring.

 *The Fold Down control is unavailable in SETUP mode when the Hardware Setup dialog is open.*


To enable (or disable) Fold Down for a Monitor Path:

- 1 Enter SETUP mode. The SETUP LED lights green.
- 2 Turn the MONITOR encoder until the Monitor display reads “FOLDWN.”
- 3 Press the MONITOR encoder button to select FOLDWN. The SETUP LED blinks on and off.
- 4 Turn MONITOR encoder until the display shows the Monitor Path you want: MAIN, ALT, or HP.
- 5 Press the MONITOR encoder button to select the displayed Monitor Path.
- 6 Turn the MONITOR encoder to display an option. The following options are available depending on which Monitor Path is selected:
 - for MAIN: NONE or ON.
 - for ALT: NONE or ON.
 - for HP: NONE (Do Not Fold Down), ON (Fold Down If Control Room Is Larger Than Stereo), or ON-LF (Fold Down Without LFE).
- 7 Press the MONITOR encoder to select the displayed option. The display shows the selected Monitor Path.

- 8 Repeat the preceding steps to set the Fold Down options for each of the other Monitor Paths.
- 9 Press the SETUP button to exit FOLDDWN and return to the top level of the SETUP Options menu. The SETUP LED stops blinking and lights solid green.
- 10 Exit SETUP mode.

Analog Line Input Reference Level (IN REF)

In SETUP mode, the Analog Line Input Reference Level (IN REF) control lets you set the Reference Level for each of the four analog input channels.

 *The Analog Line Input Reference Level control is unavailable in SETUP mode when the Hardware Setup dialog is open.*


To set the Reference Level for each of the analog inputs:

- 1 Enter SETUP mode. The SETUP LED lights green.
- 2 Turn the MONITOR encoder until the display shows "IN REF."
- 3 Press the MONITOR encoder button to select IN REF. The SETUP LED blinks on and off.
- 4 Turn MONITOR encoder until the display shows "IN 1."
- 5 Press the MONITOR encoder button to select IN 1 (Analog Input channel 1).
- 6 Turn the MONITOR encoder to display either "-10dBV" or "+4dBu".
- 7 Press the MONITOR encoder button to select and confirm the displayed Input Reference Level. The display shows "IN 1."

- 8 Repeat preceding steps to set the Input Reference Level for Analog Input 2–4.
- 9 Press SETUP button to exit IN REF and return to top level of SETUP Options menu. The SETUP LED stops blinking and lights solid green.
- 10 Exit SETUP mode.

Limiter (LIMITR)

In SETUP mode, the Limiter (LIMITR) control lets you set the whether or not a limiter is enabled for each of the four available analog inputs.

 *The Limiter control is unavailable in SETUP mode when the Hardware Setup dialog is open.*


To enable (or disable) limiter for each of the analog inputs:

- 1 Enter SETUP mode. The SETUP LED lights green.
- 2 Turn the MONITOR encoder until the display shows "LIMITR."
- 3 Press the MONITOR encoder button to select LIMITR. The SETUP LED blinks on and off.
- 4 Turn MONITOR encoder until the display shows "IN1."
- 5 Press the MONITOR encoder button to select IN 1 (Analog Input channel 1).
- 6 Turn the MONITOR encoder to display one of the following Limiter options:
 - NONE
 - SCLIP
 - CURV
- 7 Press the MONITOR encoder button to select the displayed Limiter option. The display shows "IN1."

- 8 Repeat preceding steps to set the Limiter options for Analog Input 2–4.
- 9 Press SETUP button to exit LIMITR and return to top level of SETUP Options menu. The SETUP LED stops blinking and lights solid green.
- 10 Exit SETUP mode.

Internal Sample Rate (SRATE)

In SETUP mode, the Internal Sample Rate (SRATE) control lets you set the internal sample rate for HD OMNI (44.1 kHz to 192 kHz).

 *The Internal Sample Rate control is unavailable in SETUP mode when the Hardware Setup dialog is open.*

At sample rates of 176.4 kHz and 192 kHz, Sample Rate Conversion is automatically enabled if the Digital 1–2 Input Format is set to Optical (S/PDIF).

To set the Internal Sample Rate:

- 1 Ensure that the Hardware Setup dialog is not open and that no Pro Tools session is open.
- 2 Enter SETUP mode. The SETUP LED lights green.
- 3 Turn the MONITOR encoder until the display shows “SRATE.”
- 4 Press the MONITOR encoder button to select SRATE. The SETUP LED blinks on and off.

5 Turn MONITOR encoder until the display shows the sample rate:

- 44.1 kHz
- 48 kHz
- 88.2 kHz
- 96 kHz
- 176.4 kHz
- 192 kHz


6 Press the MONITOR encoder button to select and confirm the displayed sample rate.

7 Press SETUP button to exit SRATE and return to top level of SETUP Options menu. The SETUP LED stops blinking and lights solid green.

8 Exit SETUP mode.

Clock Source (CLOCK)

In SETUP mode, the Clock Source (CLOCK) control lets you set the digital clock source for HD OMNI.

 *The Clock Source control is unavailable in SETUP mode when Pro Tools is running.*

To set the Internal Sample Rate:

- 1 Ensure that Pro Tools is not running.
- 2 Enter SETUP mode. The SETUP LED lights green.
- 3 Turn the MONITOR encoder until the display shows “CLOCK.”
- 4 Press the MONITOR encoder button to select CLOCK. The SETUP LED blinks on and off.

5 Turn MONITOR encoder until the display shows the Clock Source:

- INTRNL (Internal)
- DIG IN
- WORD (Word Clock)
- ADAT

⚠ *At sample rates of 88.2 kHz and higher, the ability to select the base sample rate for Word Clock (44.1 kHz or 48 kHz) is not available in SETUP mode and must be done in the Pro Tools Hardware Setup (or Core Audio manager on Mac).*

6 Press the MONITOR encoder button to select the displayed clock source.

7 Press SETUP button to exit CLOCK and return to top level of SETUP Options menu. The SETUP LED stops blinking and lights solid green.

8 Exit SETUP mode.

Digital 1–2 Input Source (DIG1–2)

In SETUP mode, the Digital 1–2 Input Source (DIG IN) control lets you set the Digital 1–2 Input Format for HD OMNI.

⚠ *The Digital 1–2 Input Source control is unavailable in SETUP mode when the Hardware Setup dialog is open.*

At sample rates of 176.4 kHz and 192 kHz, Sample Rate Conversion is automatically enabled if the Digital 1–2 Input Format is set to Optical (S/PDIF).

To set the Digital 1–2 Input Source:

1 Enter SETUP mode. The SETUP LED lights green.

2 Turn the MONITOR encoder until the display shows “DIG1–2.”

3 Press the MONITOR encoder button to select DIG1–2. The SETUP LED blinks on and off.

4 Turn MONITOR encoder until the display shows the Digital 1–2 Input Source:

- AES
- S/PDIF
- OPTICAL


5 Press the MONITOR encoder button to select the displayed Digital 1–2 Input Source.

6 Press SETUP button to exit DIG1–2 and return to top level of SETUP Options menu. The SETUP LED stops blinking and lights solid green.

7 Exit SETUP mode.

Sample Rate Conversion (SRC1–2)

In SETUP mode, the Sample Rate Conversion (SRC1–2) control lets you enable (or disable) Sample Rate Conversion for the selected Digital 1–2 Input Source.

 *The Digital 1–2 Input Source control is unavailable in SETUP mode when the Hardware Setup dialog is open.*

At sample rates of 176.4 kHz and 192 kHz, Sample Rate Conversion is automatically enabled if the Digital 1–2 Input Format is set to Optical (S/PDIF).

To enable (or disable) Sample Rate conversion for the selected Digital 1–2 Input Source:

- 1 Enter SETUP mode. The SETUP LED lights green.
- 2 Turn the MONITOR encoder until the display shows “SRC1–2.”
- 3 Press the MONITOR encoder button to select SRC1–2. The SETUP LED blinks on and off.
- 4 Turn MONITOR encoder until the display shows ON (or OFF).
- 5 Press the MONITOR encoder button to enable (or disable) Sample Rate Conversion for the currently selected Digital 1–2 Input Source.
- 6 Press SETUP button to exit SRC1–2 and return to top level of SETUP Options menu. The SETUP LED stops blinking and lights solid green.
- 7 Exit SETUP mode.

SPL Display Calibration (SPLCAL)

In SETUP mode, the SPL Display Calibration (SPLCAL) control lets you change the Monitor display to read in SPL (Sound Pressure Level) instead of the factory default dB values. Calibrating for SPL requires an SPL meter and is common in post-production environments where monitoring standards are commonly observed for greater portability, repeatability, and predictability of mixed material.

HD OMNI lets you adjust the SPL Display Calibration both for the MAIN and ALT Monitor Paths.



To properly calibrate the analog speaker outputs, you will need to first use OUTRIM mode and an SPL meter. After each speaker output has been properly trimmed and calibrated to an SPL value, use the SPL Display Calibration to set the SPL value to match the level that was calibrated in OUTRIM mode. For more information, see Appendix B, “Sound Pressure Level Display Calibration.”

To enter SPL Display Calibration mode:

- 1** Enter SETUP mode. The SETUP LED lights green.
- 2** Turn the MONITOR encoder until the display shows “SPLCAL.”
- 3** Press the MONITOR encoder button to select SPLCAL. The SETUP LED blinks on and off.
- 4** Turn MONITOR encoder until the display shows one of the following options:
 - CalMn (calibrate SPL for MAIN)
 - or –
 - CalAlt (calibrate SPL for ALT)
- 5** Press the MONITOR encoder button to select the displayed option.
- 6** For the selected Monitor Path option (MAIN or ALT), turn the MONITOR encoder until the display shows SET.
- 7** Press the MONITOR encoder button to select the SET. The display changes to show 85SPL.
- 8** Turn the MONITOR encoder to until the SPL reading is displayed.
- 9** Press the MONITOR encoder button to confirm the setting.
- 10** Press SETUP button to exit SPLCAL and return to top level of SETUP Options menu. The SETUP LED stops blinking and lights solid green.
- 11** Exit SETUP mode.

To cancel the SPL value:

- 1** Enter SETUP mode. The SETUP LED lights green.
- 2** Turn the MONITOR encoder until the display shows “SPLCAL.”
- 3** Press the MONITOR encoder button to select SPLCAL. The SETUP LED blinks on and off.
- 4** Turn MONITOR encoder until the display shows one of the following options:
 - CalMn (calibrate SPL for MAIN)
 - or –
 - CalAlt (calibrate SPL for ALT)
- 5** Press the MONITOR encoder button to select the displayed option.
- 6** For the selected Monitor Path option (MAIN or ALT), turn the MONITOR encoder until the display shows NO SPL.
- 7** Press the MONITOR encoder button to confirm the setting.
- 8** Press SETUP button to exit SPLCAL and return to top level of SETUP Options menu. The SETUP LED stops blinking and lights solid green.
- 9** Exit SETUP mode.

Fan Control (FAN)

In SETUP mode, the Fan Control (FAN) lets you set the HD OMNI cooling fan behavior.

To set the Fan Control setting:

- 1 Enter SETUP mode. The SETUP LED lights green.
- 2 Turn the MONITOR encoder until the display shows “FAN.”
- 3 Press the MONITOR encoder button to select FAN. The SETUP LED blinks on and off.
- 4 Turn MONITOR encoder until the display shows one of the following options:

ON The fan is always on. Select this option if you are installing HD OMNI in a machine room or isobox.

– or –

AUTO The fan runs at high or low speed automatically, depending on the internal temperature of HD OMNI. Select this option if HD OMNI is present in your listening environment.

- 5 Press the MONITOR encoder button to select the displayed FAN option.
- 6 Press SETUP button to exit FAN and return to top level of SETUP Options menu. The SETUP LED stops blinking and lights solid green.
- 7 Exit SETUP mode.

Fan Failure Mode

If the fan stalls or fails completely, HD OMNI continues to operate normally, but the Monitor LCD displays “FANerr” and the backlighting changes to red.

If Fan Failure mode engages, do the following:

- Finish your production tasks as quickly as possible and then power cycle HD OMNI (quit Pro Tools, if Pro Tools is running) to reset the fan.
- If the fan still doesn’t start, try initiating a factory reset (see “Factory Reset (RESET)” on page 54).
- If the fan still doesn’t start, power off HD OMNI immediately and contact Avid or your Avid dealer for repair.

Firmware Version (VER)

In SETUP mode, the Firmware Version (FIRM) options let you see the current versions of the Firmware, FPGA, and Board revision for HD OMNI.


To view the current version of the Firmware, FPGA, or Board revision:

- 1 Enter SETUP mode. The SETUP LED lights green.
- 2 Turn the MONITOR encoder until the display shows “VER.”
- 3 Press the MONITOR encoder button to select FIRM. The SETUP LED blinks on and off.
- 4 Turn MONITOR encoder until the display shows one of the following options:
 - FIRM
 - FPGA
 - BOARD

- 5 Press the MONITOR encoder button to select the displayed option. The version number for the selected option is shown in the display.
- 6 Press SETUP button to exit the current view and return to VER.
- 7 Repeat steps 4–6 to view the versions of the other options.
- 8 Press SETUP button to exit VER and return to top level of SETUP Options menu. The SETUP LED stops blinking and lights solid green.
- 9 Press SETUP again to exit SETUP mode.

Factory Reset (RESET)

In SETUP mode, the Factory Reset (RESET) command returns HD OMNI parameters to the factory default settings.

 *Factory Reset is not available if Pro Tools is running. Quit Pro Tools before resetting HD OMNI to the factory settings.*

To reset HD OMNI to the factory default settings:

- 1 Enter SETUP mode. The SETUP LED lights green.
- 2 Turn the MONITOR encoder until the display shows “RESET.”
- 3 Press the MONITOR encoder button to select RESET.

4 Do one of the following:

- Press the MONITOR encoder button again to confirm RESET.
- or –
- Press the SETUP button to cancel the factory reset.

5 Exit SETUP mode.

Display Contrast (CNTRST)

In SETUP mode, the Display Contrast (CNTRST) control lets you adjust the contrast for the HD OMNI display (0–62).


To adjust the contrast for the HD OMNI Display:

- 1 Enter SETUP mode. The SETUP LED lights green.
- 2 Turn the MONITOR encoder until the display shows “CNTRST.”
- 3 Press the MONITOR encoder button to select CNTRST. The SETUP LED blinks on and off.
- 4 Turn the MONITOR encoder to adjust the Display Contrast (STEP 0–62).
- 5 Press the MONITOR encoder button to select the displayed setting. The SETUP LED stops blinking and lights solid green, and the display shows CNTRST.
- 6 Exit SETUP mode.


appendix a

Pinout Diagrams for the DB-25 Connectors

Analog Output DB-25

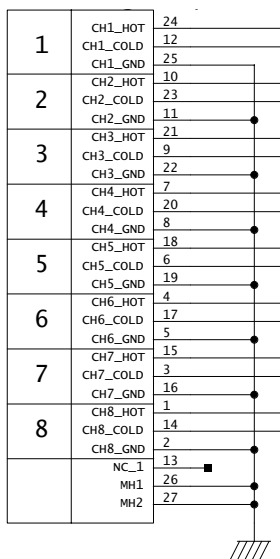

AES/EBU DB-25

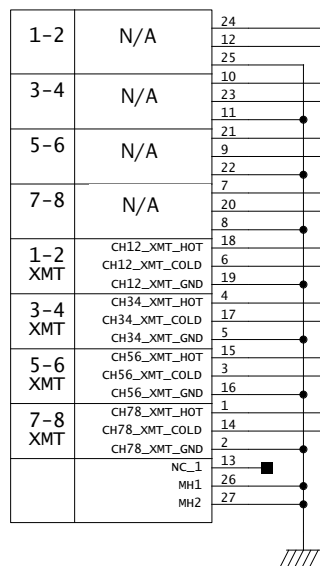

appendix b

Sound Pressure Level Display Calibration

To properly calibrate the analog speaker outputs, the you will need to first use OTRIM mode and an SPL meter. After each speaker output has been properly trimmed and calibrated to an SPL value, use the SPL Display Calibration to set the SPL value to match the level that was calibrated in OTRIM mode.

For example, to calibrate a 5.1 surround MAIN CR Monitor Path at 85 SPL:

- 1 Create a Pro Tools session with 7 Auxiliary Input tracks and do the following:
 - Bus the Output of the first Auxiliary Input track to the Inputs of the other 6 Auxiliary Input tracks (2–7).
 - Route each of the Outputs of Auxiliary Input tracks 2–7 to Monitor paths 1–6.
 - Lower your main output volume.
 - Insert Signal Generator on the first Auxiliary Input track and set it to generate pink noise at –20 dBFS, and set the track to Solo Safe mode.
 - Be sure all tracks are set to Unity.
 - Slowly increase the main output volume to Unity.
- 2 On HD OMNI, set the MAIN CR Path gain to 0 dB using the Monitor encoder.
- 3 Enter OTRIM mode and select OUT 1.
- 4 Solo the Auxiliary Input track in Pro Tools that is routed to the first speaker.
- 5 Using an SPL Meter at the mix position, trim the output from the HD OMNI front panel until the SPL is reached (85 SPL).



TRIM mode on HD OMNI reads in dB.



The SPL meter should be set to Slow Response with a C-weighted scale.

- 6 Repeat steps 3–5 for all Outputs.
- 7 Exit OTRIM mode.
- 8 Turn the MONITOR encoder until the display shows SPLCAL.
- 9 Press the MONITOR encoder button to select SPLCAL.
- 10 Turn MONITOR encoder until the display shows Cal MN.
- 11 Press the MONITOR encoder button to select Cal MN.
- 12 Turn the MONITOR encoder until the display shows SET.
- 13 Press the MONITOR encoder button to select the SET. The display changes to show OSPL.
- 14 Turn the MONITOR encoder to until the display reads 85 SPL.

15 Press the MONITOR encoder button to confirm the setting.



In some cases the ALT CR Path might use the same outputs as the MAIN CR Path. In that case, do not re-trim the ALT speaker outputs, instead adjust the ALT Control Room level and calibrate it to match to the reference set for the MAIN CR Path (in our example 85 SPL).

appendix c

Compliance Information

Environmental Compliance

Disposal of Waste Equipment by Users in the European Union



This symbol on the product or its packaging indicates that this product must not be disposed of with other waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city recycling office or the dealer from whom you purchased the product.

Proposition 65 Warning

⚠ *This product contains chemicals, including lead, known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.*

Perchlorate Notice

This product may contain a lithium coin battery. The State of California requires the following disclosure statement: "Perchlorate Material – special handling may apply, See www.dtsc.ca.gov/hazardouswaste/perchlorate."

Recycling Notice



EMC (Electromagnetic Compliance)

Avid declares that this product complies with the following standards regulating emissions and immunity:

- FCC Part 15 Class A
- EN55103-1 E4
- EN55103-2 E4
- AS/NZS CISPR 22 Class A

FCC Compliance for United States

Radio and Television Interference

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules.

DECLARATION OF CONFORMITY

We, Avid, 75 Network Drive
Burlington, MA 01803, USA
650-731-6300

declare under our sole responsibility that the product
HD OMNI
complies with Part 15 of FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Communication Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

 
- Reorient or locate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any modifications to the unit, unless expressly approved by Avid, could void the user's authority to operate the equipment.

Argentina Conformity



Australia and New Zealand EMC Regulations



Ken Hopkins
Avid Technology (Aust) Pty Ltd.
c/o – Elliot House
Suite 810, Level 8
140 Arthur Street
North Sydney
NSW – 2060

Canadian Compliance

This Class A digital apparatus complies with Canadian ICES-003

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada

Korean EMC Regulations

다음을 주지하십시오: 이 장비는 상업적인 사용을 위한 EMC 등록을 얻었다. 그것이 잘못되게 판매되거나 구매되면 일 경우에는, 가정 사용을 위해 증명된 장비를 위해 그것을 교환하십시오

Taiwan EMC Regulations

警告使用者:

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

European Union Declaration of Conformity

(EMC and Safety)



Avid is authorized to apply the CE (Conformité Européenne) mark on this compliant equipment thereby declaring conformity to EMC Directive 2004/108/EC and Low Voltage Directive 2006/95/EC.

Safety Compliance

Safety Statement

This equipment has been tested to comply with USA and Canadian safety certification in accordance with the specifications of UL Standards: UL60065 7th /IEC 60065 7th and Canadian CAN/CSA C22.2 60065:03. Avid Inc., has been authorized to apply the appropriate UL & CUL mark on its compliant equipment.

Warning



Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this equipment near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

8) Do not install near any heat sources such as radiators, heat registers, stoves, or other equipment (including amplifiers) that produce heat.

9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10) Protect power cords from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the equipment.

11) Only use attachments/accessories specified by the manufacturer.

12) For products that are not rack-mountable: Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the equipment. When a cart is used, use caution when moving the cart/equipment combination to avoid injury from tip-over.

13) Unplug this equipment during lightning storms or when unused for long periods of time.

14) Refer all servicing to qualified service personnel. Servicing is required when the equipment has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the equipment, the equipment has been exposed to rain or moisture, does not operate normally, or has been dropped.

15) For products that are a Mains powered device: The equipment shall not be exposed to dripping or splashing and no objects filled with liquids (such as vases) shall be placed on the equipment.

Warning! To reduce the risk of fire or electric shock, do not expose this equipment to rain or moisture.

16) For products containing a lithium battery:
CAUTION! Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

17) For products with a power switch:
The main power switch is located on the front panel of the HD OMNI. It should remain accessible after installation.

18) The equipment shall be used at a maximum ambient temperature of 40° C.

תאימות לתקני הבטיחות

הצהרת בטיחות

מכשיר זה נבדק ונמצא תואם לדרישות רישוי הבטיחות של ארצות הברית וקנדה, בהתאם למפרט של תקני UL: UL 60065 7th / IEC 60065 7th וכן את מצרייה התואמים בסימון הרלוונטי של UL ו-CUL.

אזהרה



הוראות בטיחות חשובות

- 1) יש לקרוא את ההוראות.
- 2) יש לשמור את ההוראות במקום בטוח.
- 3) יש לשים לב לכל האזהרות.
- 4) יש לפעול בהתאם להוראות.
- 5) אין להשתמש במכשיר זה ליד מים.
- 6) יש לנקות את המכשיר רק באמצעות מטלית יבשה.
- 7) אין לחסום שום פתח אוורור. יש לבצע את ההתקנה בהתאם להוראות היצרן.
- 8) אין להחזיק את המכשיר ליד מקורות חום כגון מקרנים, פתחי אוורור של מערכות הסקה מרכזיות, תנורים או פריטי ציוד אחרים (לרבות מגברים) המפיקים חום.

9) אין לעשות דבר שעלול להפריע לתכלית הבטיחותית של חקע מקוטב או חקע עם הארקה. חקע מקוטב מצויד בשני להבים, שאחד מהם רחב יותר חקע עם הארקה מצויד בשני להבים ובנוסף בפין הארקה. הלהב הרחב או פין הארקה נועדו לשמור על בטיחות המשתמש. אם החקע שסופק לא מתאים לשקע החשמל, יש להתייעץ עם חשמלאי לצורך החלפתו בחקע מתאים.

10) יש להבן על כבלי החשמל כדי למנוע קיפול או דריכה עליהם, וזאת במיוחד במסך לחקעים, למפצלי שקעים ובנקודות הציאה של כבלי החשמל מהמכשירים.

11) יש להשתמש אך ורק באבזרים אשר אושרו על-ידי היצרן.

12) כאשר מדובר במוצרים שלא ניתן להתקנם בארון ציוד: יש להשתמש בעגלות, מעמדים, חצובות מדפוס או שולחנות המאושרים על-ידי היצרן או הנמכרים עם פריט הציוד הרלוונטי. כאשר מניחים את המכשיר על עגלה, יש לנקוט זהירות בעת הזזתה, כדי למנוע נפילה העלולה לגרום לפגיעה.

13) יש לנתק את המכשיר משקע החשמל בזמן סערת ברקים או כאשר הוא לא בשימוש במשך תקופה ארוכה.

14) בכל טיפול במכשיר יש לפנות לאנשי שירות מוסמכים. טיפול נדרש כאשר המכשיר נזוק בצורה כלשהי, לדוגמה במקרים הבאים: נזק לכבל או לחקע חשמלי; שפיכת נוזלים או נפילת חפצים לתוך המכשיר; חשיפת המכשיר לגשם או ללחות; ליקוי בפעולתו הרגילה של המכשיר; נפילת המכשיר.

15) כאשר מדובר במוצרים המחוברים לרשת החשמל: יש למנוע את חשיפת המכשיר לספטוף או התוה של נוזלים. כמו כן, אין להניח על המכשיר חפצים המכילים נוזלים (כגון אגרטילים).

אזהרה! כדי לצמצם סכנה של אש או מכת חשמל, אין לחשוף את המכשיר לגשם או לחות.

16) כאשר המוצר מכיל סוללת ליטיום: ודויות! קיימת סכנת התפוצצות אם החלפת הסוללה לא מתבצעת בצורה נכונה. יש להחליף את הסוללה רק בסוללה זהה או שוות ערך.

17) כאשר המוצר מצויד במתח הפעלה: מתח ההפעלה הראשי נמצא על הלוח הקדמי של ה-HD OMNI. יש להקפיד שהגישה אליו חופשית גם לאחר התקנת המכשיר.

18) אין להשתמש במכשיר כאשר טמפרטורת הסביבה עולה על $40^{\circ}C$.

index

Numerics

- 2.1 monitoring format 33
- 20 dB pad 6
- 48V phantom power 6

A

- AC Power connector 15
- ADAT Optical 13
- AES/EBU 12
 - Hardware Setup 27
- AES/EBU (XLR) input 12
- AES/EBU Output
 - DB-25 Pinout Diagram 55
- AES/EBU output (DB-25) 12
- ALT Control Room monitoring path 29
- Analog Line Input Reference Level (IN REF) control 48
- Analog Output 12
 - DB-25 Pinout Diagram 55
- analog output (DB-25) 12
- Analog Output Level (OUTLVL) control 46
- Analog Output Trim (OUTRIM) control 46
- audio interfaces
 - heat and ventilation 17
- Avid
 - customer success 4

B

- back panel features 11

C

- CH1 and CH2 Inputs 6
- Clock Source (CLOCK) control 49
- Clock Source pop-up menu 26
 - compatibility 2
- Control Room Fold-Down setting 36
- Control Room monitoring paths 29
- Control Room Path
 - channel matrix 32
- Control Room paths 30
- CR Path 29
- CR Path channel assignments 34
- CUE 1-2 42
- Curv 28

D

- DigiLink
 - Cable Specifications 14
- DigiLink Mini
 - Cable Specifications 14
 - Expansion port 14
- DigiLink Mini Ports 13
- Digital 1-2 Input Source (DIG IN) control 50
- Digital Format 27
- Digital I/O
 - connectors 12
- direct monitoring 37
- Do Not Fold Down (L/R Channels Only) 36
- Do Not Fold Down Between CR Paths 36

E

- Engage Fold-Down for ALT option 36
- Engage Fold-Down for Main option 36
- EXPANSION PORT 14
- Ext. Clock Input 8
- Ext. Clock Output 27

F

- Fan 53
- Fan Control (FAN) 53
- Fold Down 33
- Fold Down (FOLDWN) control 47
- Fold Down Between CR Paths 36
- Fold Down If Control Room Is Larger Than Stereo 36
- Fold Down options 35
- Fold Down Without LFE (If Present) 36

H

- Hardware Setup 25
 - Analog Out page 28
 - Clock Source 26
 - configuring 25
 - Digital Format 27
 - digital input format 27
 - Ext. Clock Output 27
 - Limiter pop-up menu 28
 - Mixer page 37, 29
 - Output Level 28
 - physical inputs 26
 - Sample Rate 26
 - sample rate conversion 27
 - TRS Mirrors 29

HD OMNI

- Analog I/O 1
 - analog inputs 11, 41
 - back panel 11
 - connecting 17, 18
 - Digital I/O 1
 - direct monitoring 37
 - features 1, 5
 - hardware inserts 11
 - input limiting 28
 - line inputs 11
 - microphone inputs 11
 - Mixer channel strips 37, 29, 2, 41
 - Overview 5
 - Physical outputs in I/O Setup 41, 5
 - synchronization 2
- Headphone Fold-Down setting 36
- High Pass Filter button 7

I

- I/O Setup
 - Bus page 42
 - dialog 39
 - H/W Insert Delays page 43
 - Input page 39, 43
 - Mic Preamps page 43
 - Output page 40
- I/O Setup dialog 39
- IN/OUT button 9
- Input Type button 6
- INSERT button 7
- Internal clock (INT) mode 8
- Internal clock mode 8
- Internal Sample Rate (SRATE) control 49

L

- Lightpipe
 - Optical port 13
- Limiter (LIMITR) control 48
- LINK button 7
- Loop
 - Master 8
- Loop LED 8
- Loop Master 8
- Loop Sync
 - connecting 19
 - ports 15

M

- MAIN Control Room monitoring path 29
- METERS 9
- Monitor Output Level selector 35
- Monitor Path Assignments 30
- Monitoring
 - 2.1 format 33
 - ALT 29
 - CR Path channel assignments 34, 32
 - Fold Down 33, 35
 - MAIN 29
 - odd format assignments 32

O

- Optical (ADAT) 27
 - about Lightpipe-compatible devices 13
- Optical (S/PDIF) 13
 - Hardware Setup 27
- Optical (TOSLINK) input and output 13
- Optical Output Format 27
- OUTRIM mode 57

P

- PAD 6
- PAD button 6
- Phase Invert button 7
- Pinout Diagrams 55
- Power Switch 5
- Preamp Controls 6
- PREAMP Display 7
- PREAMP Encoder 7
- PRIMARY PORT (DigiLink Mini) 13
- Pro Tools
 - Hardware Setup 25
 - I/O Setup 39

R

- Record/Input Monitor Enable setting 38
- Reference Level (Analog Input) 28
- registration 2

S

- S/MUX 2 13
- S/MUX 4 13
- S/PDIF
 - Hardware Setup 27
 - S/PDIF input and output 12
 - S/PDIF Output Format 27
- Sample Rate 8
- Sample Rate (Session) 8
- Sample Rate Conversion (SRC) 27
- Sample Rate Conversion (SRC1–2) control 51
- Setup menu
 - I/O Setup 39
- SETUP mode 45
- Soft Clip 28
- SPL 51
- SPL Display Calibration 57
- SPL Display Calibration (SPLCAL) control 51
- studio connections 22
- Sync Mode
 - LEDs 8
- synchronization
 - word clock ports 14
- system requirements 2

T

Tascam DA30 27
technical support 4
TRS Mirrors 29
TRS Output Mirrors (TRSOUT) control 47
TRS Outputs 12

W

website 4
Word Clock 8, 14, 26
Word Clock ports 14



Avid
2001 Junipero Serra Boulevard
Daly City, CA 94014-3886 USA

Technical Support (USA)
Visit the Online Support Center at
www.avid.com/support

Product Information
For company and product information,
visit us on the web at www.avid.com