



# MDW<sup>®</sup> Hi-Res Parametric EQ Plug-In Guide

Version 3.0

## Legal Notices

This guide is copyrighted ©2010 by Avid Technology, Inc., (hereafter “Avid”), with all rights reserved. Under copyright laws, this guide may not be duplicated in whole or in part without the written consent of Avid.

003, 003 Rack, 96 I/O, 96i I/O, 192 Digital I/O, 192 I/O, 888|24 I/O, 882|20 I/O, 1622 I/O, 24-Bit ADAT Bridge I/O, AudioSuite, Avid, Avid DNA, Avid Mojo, Avid Unity, Avid Unity ISIS, Avid Xpress, AVoption, Axiom, Beat Detective, Bomb Factory, Bruno, C|24, Command|8, Control|24, D-Command, D-Control, D-Fi, D-fx, D-Show, D-Verb, DAE, Digi 002, DigiBase, DigiDelivery, Digidesign, Digidesign Audio Engine, Digidesign Intelligent Noise Reduction, Digidesign TDM Bus, DigiDrive, DigiRack, DigiTest, DigiTranslator, DINR, DV Toolkit, EditPack, Eleven, EUCON, HD Accel, HD Core, HD I/O, HD MADI, HD OMNI, HD Process, Hybrid, Impact, Interplay, LoFi, M-Audio, MachineControl, Maxim, Mbox, MediaComposer, MIDI I/O, MIX, MultiShell, Nitris, OMF, OMF Interchange, PRE, ProControl, Pro Tools M-Powered, Pro Tools, Pro Tools|HD, Pro Tools LE, QuickPunch, Recti-Fi, Reel Tape, Reso, Reverb One, ReVibe, RTAS, Sibelius, Smack!, SoundReplacer, Sound Designer II, Strike, Structure, SYNC HD, SYNC I/O, Synchronic, TL Aggro, TL AutoPan, TL Drum Rehab, TL Everyphase, TL Fauxlдер, TL In Tune, TL MasterMeter, TL Metro, TL Space, TL Utilities, Transfuser, Trillium Lane Labs, Vari-Fi Velvet, X-Form, and XMON are trademarks or registered trademarks of Avid Technology, Inc. Xpand! is Registered in the U.S. Patent and Trademark Office. All other trademarks are the property of their respective owners.

Product features, specifications, system requirements, and availability are subject to change without notice.

**Guide Part Number** 9329-65053-00 REV A 9/10

## Documentation Feedback

At Avid, we are always looking for ways to improve our documentation. If you have comments, corrections, or suggestions regarding our documentation, email us at ***techpubs@avid.com***.

# contents

<b>Chapter 1. Introduction</b>	1
MDW EQ Plug-In Features	1
Contents of the Boxed Version of Your Plug-In	1
System Requirements and Compatibility	2
Registering Plug-Ins	2
Working with Plug-Ins	2
Conventions Used in This Guide	3
About <a href="http://www.avid.com">www.avid.com</a>	3
<b>Chapter 2. Installation and Authorization</b>	5
Installing Plug-Ins for Pro Tools	5
Authorizing Plug-Ins	5
Removing Plug-Ins	6
<b>Chapter 3. Using MDW EQ</b>	7
The MDW EQ 5-Band Plug-In Window	7
MDW EQ 3-Band Plug-In Window	8
MDW EQ Controls	9
<b>Appendix A. DSP Requirements for TDM Plug-Ins</b>	15
MDW 5-Band EQ DSP Requirements	16
MDW 3-Band EQ DSP Requirements	17

## chapter 1

# Introduction

The Massenburg DesignWorks® Hi-Res EQ (MDW EQ) TDM and RTAS plug-in for Pro Tools® and VENUE™ systems was developed by a team led by the renowned recording engineer and producer George Massenburg. MDW EQ® features internal double-precision 48-bit processing which provides unprecedented clarity and resolution, superlative smoothness, and excellent high-frequency response. Also, when working at 44.1 & 48kHz sampling rates, MDW EQ upsamples to 88.2 & 96kHz respectively to do all EQ processing, resulting in unprecedented high-frequency smoothness.

This guide provides information on installing and using the MDW EQ plug-in in Pro Tools sessions. For general information on using plug-ins with Pro Tools, see the *Pro Tools Reference Guide*.

---

### MDW EQ Plug-In Features

Continuing the tradition of unrelenting attention to quality, MDW EQ provides features and benefits for those who want the best.

This plug-in delivers double-precision 48-bit processing, high-resolution 96 kHz sample-rate processing for audio recorded at 48 and 96 kHz, and 192 kHz sample-rate processing for 192 kHz audio.

### Features

- High-resolution 96 kHz sample-rate processing for audio recorded at 48 and 96 kHz, and 192 kHz sample-rate processing for 192 kHz audio
- Wide frequency selection from 10 Hz to 41 kHz on every band
- Separate three- and five-band plug-in versions
- DSP efficiency (Pro Tools|HD® and VENUE systems only)
- A/B compare feature
- Phase Invert switch
- IsoPeak®—A simple and fast tool to isolate that frequency you're looking for
- Available in TDM/RTAS/AS or just RTAS/AS configurations

---

### Contents of the Boxed Version of Your Plug-In

Your plug-in package contains the following components:

- Installation disc
- Activation Card with an Activation Code

---

## System Requirements and Compatibility

To use the MDW EQ plug-in, you need the following:

- An iLok USB Smart Key
- An iLok.com account for managing iLok licenses
- One of the following:
  - A qualified Pro Tools system
  - A third-party software application that supports the TDM, RTAS, or AudioSuite plug-in standard
  - A qualified Avid® Xpress®, Avid Xpress DV, or Avid DNA™ system
  - A qualified VENUE system (TDM only)

Avid can only assure compatibility and provide support for hardware and software it has tested and approved.

For complete system requirements and a list of qualified computers, operating systems, hard drives, and third-party devices, visit:

[www.avid.com/compatibility](http://www.avid.com/compatibility)

---

## Registering Plug-Ins

Your plug-in purchase is automatically registered when you activate your iLok license (see “Authorizing Plug-Ins” on page 5).

Registered users are eligible to receive software update and upgrade notices.

For information on technical support, visit [www.avid.com](http://www.avid.com).

---

## Working with Plug-Ins

Besides the information provided in this guide, refer to the *Pro Tools Reference Guide* for general information on working with plug-ins, including:

- Inserting plug-ins on tracks
- Using clip indicators
- Navigating the Plug-In window
- Adjusting plug-in controls
- Automating plug-ins
- Using plug-in presets

---





# Conventions Used in This Guide

Pro Tools guides use the following conventions to indicate menu choices and key commands:

Convention	Action
File > Save	Choose Save from the File menu
Control+N	Hold down the Control key and press the N key
Control-click	Hold down the Control key and click the mouse button
Right-click	Click with the right mouse button

The names of Commands, Options, and Settings that appear on-screen are in a different font.

The following symbols are used to highlight important information:

-  *User Tips are helpful hints for getting the most from your Pro Tools system.*
-  *Important Notices include information that could affect your Pro Tools session data or the performance of your Pro Tools system.*
-  *Shortcuts show you useful keyboard or mouse shortcuts.*
-  *Cross References point to related sections in this guide and other Pro Tools and VENUE guides.*

---

# About [www.avid.com](http://www.avid.com)

The Avid website ([www.avid.com](http://www.avid.com)) is your best online source for information to help you get the most out of your Pro Tools system. The following are just a few of the services and features available.

**Product Registration** Register your purchase online.

**Support and Downloads** Contact Avid Customer Success (technical support); download software updates and the latest online manuals; browse the Compatibility documents for system requirements; search the online Knowledge Base or join the worldwide Pro Tools community on the User Conference.

**Training and Education** Study on your own using courses available online or find out how you can learn in a classroom setting at a certified Pro Tools training center.

**Products and Developers** Learn about Avid products; download demo software or learn about our Development Partners and their plug-ins, applications, and hardware.

**News and Events** Get the latest news from Avid or sign up for a Pro Tools demo.




## chapter 2

# Installation and Authorization

### Installing Plug-Ins for Pro Tools

Installers for your plug-ins can be downloaded from the Avid Store (<http://shop.avid.com>) or can be found on the plug-in installer disc (included with boxed versions of plug-ins).

An installer may also be available on the Pro Tools installer disc or on a software bundle installer disc.

 *For information on installing plug-ins for VENUE systems, see your D-Show guide.*

#### To install a plug-in:

- 1 Do one of the following:
  - Download the installer for your computer platform from [www.avid.com](http://www.avid.com). After downloading, make sure the installer is uncompressed (.dmg on Mac or .ZIP on Windows).
  - or –
  - Insert the Installer disc into your computer.
- 2 Double-click the plug-in installer application.
- 3 Follow the on-screen instructions to complete the installation.
- 4 When installation is complete, click Finish (Windows) or Quit (Mac).

When you launch Pro Tools, you are prompted to authorize your new plug-in.


### Authorizing Plug-Ins

Software is authorized using the iLok USB Smart Key (iLok), manufactured by PACE Anti-Piracy.




**iLok USB Smart Key**

An iLok can hold hundreds of licenses for all of your iLok-enabled software. Once a license for a given piece of software is placed on an iLok, you can use the iLok to authorize that software on any computer.

 *An iLok USB Smart Key is not supplied with plug-ins or software options. You can use the iLok included with certain Pro Tools systems (such as Pro Tools|HD-series systems), or purchase one separately.*

### Authorizing Downloaded Software

If you downloaded software from the Avid Store (<http://shop.avid.com>), you authorize it by downloading a license from [iLok.com](http://iLok.com) to an iLok.

 *For more information, visit the iLok website ([www.iLok.com](http://www.iLok.com)).*



## Authorizing Boxed Versions of Software

If you purchased a boxed version of software, it comes with an Activation Code (on the included Activation Card).

### To authorize software using an Activation Code:

- 1** If you do not have an iLok.com account, visit [www.iLok.com](http://www.iLok.com) and sign up for an account.
- 2** Transfer the license for your software to your iLok.com account by doing the following:
  - Visit [www.avid.com/activation](http://www.avid.com/activation).
  - and –
  - Input your Activation Code (listed on your Activation Card) and your iLok.com User ID. Your iLok.com User ID is the name you create for your iLok.com account.
- 3** Transfer the licenses from your iLok.com account to your iLok USB Smart Key by doing the following:
  - Insert the iLok into an available USB port on your computer.
  - Go to [www.iLok.com](http://www.iLok.com) and log in.
  - Follow the on-screen instructions for transferring your licences to your iLok.



*For more information, visit the iLok website ([www.iLok.com](http://www.iLok.com)).*

- 4** Launch Pro Tools.
- 5** If you have any unauthorized software installed, you are prompted to authorize it. Follow the on-screen instructions to complete the authorization process.

---

## Removing Plug-Ins

If you need to remove a plug-in from your Pro Tools system, follow the instructions below for your computer platform.

### Mac OS X

#### To remove a plug-in:

- 1** Locate and open the Plug-Ins folder on your Startup drive (Library/Application Support /Digidesign/Plug-Ins).
- 2** Do one of the following:
  - Drag the plug-in to the Trash and empty the Trash.
  - or –
  - Drag the plug-in to the Plug-Ins (Unused) folder.

### Windows

 
#### To remove a plug-in:

- 1** Choose Start > Control Panel.
- 2** Under Programs, click Uninstall a program.
- 3** Select the plug-in from the list of installed applications.
- 4** Click Uninstall.
- 5** Follow the on-screen instructions to remove the plug-in.

## chapter 3

# Using MDW EQ

### The MDW EQ 5-Band Plug-In Window

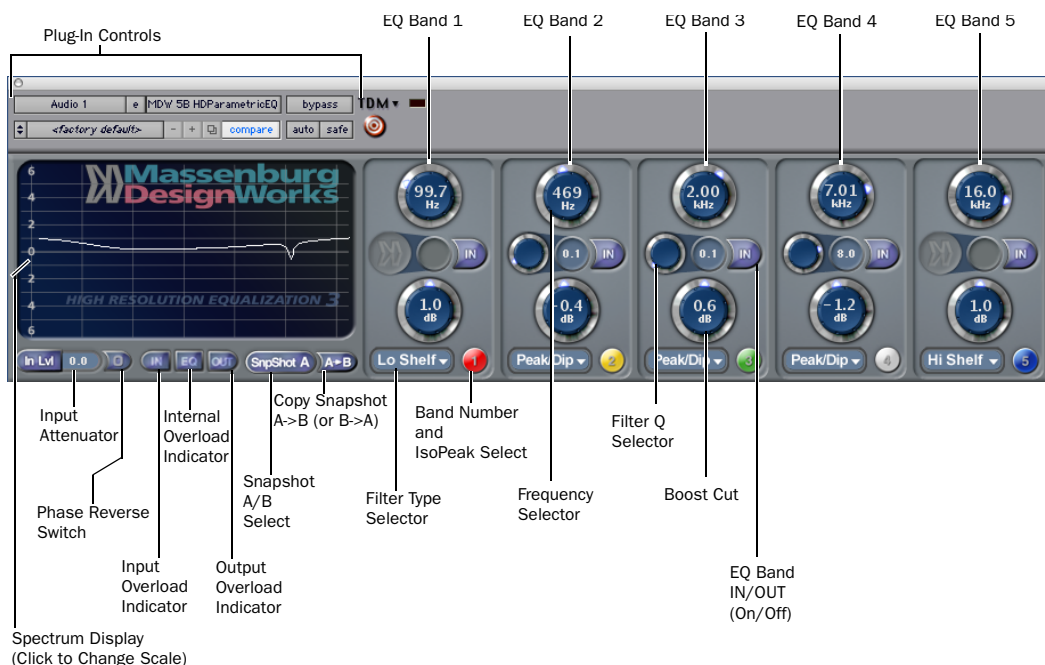

#### MDW EQ plug-in parameters

The Massenburg DesignWorks 5-Band High Resolution Equalizer has five independent filter bands connected in series. EQ Bands 1–4 can be individually set to one of seven filter types:

 
- Peak/dip
- High-frequency shelf

- Low-frequency shelf
- High-pass 6 (6 dB/octave slope)
- Low-pass 6 (6 dB/octave slope)
- High-pass 12 (12 dB/octave slope)
- Low-pass 12 (12 dB/octave slope)

Filter Band 5 can be individually set to one of eleven filter types as follows:

- Peak/dip
- High-frequency shelf
- Low-frequency shelf (1st graphic here)
- High-pass 6 (6 dB/octave slope)
- Low-pass 6 (6 dB/octave slope)
- High-pass 12 (12 dB/octave slope)
- Low-pass 12 (12 dB/octave slope)
- High-pass 18 (18 dB/octave slope)
- Low-pass 18 (18 dB/octave slope)
- High-pass 24 (24 dB/octave slope)
- Low-pass 24 (24 dB/octave slope)

## MDW EQ 3-Band Plug-In Window

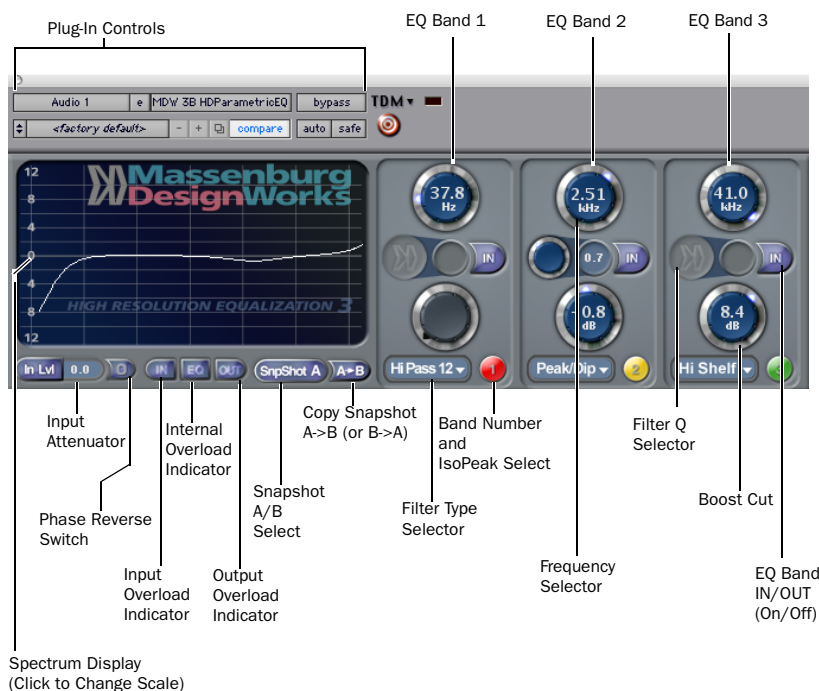

### MDW EQ plug-in parameters

The Massenburg DesignWorks 3-Band High Resolution Equalizer has three independent filter bands connected in series. All EQ bands can be individually set to one of seven filter types as follows:

- Peak/dip
- High-frequency shelf
- Low-frequency shelf
- High-pass 6 (6 dB/octave slope)
- Low-pass 6 (6 dB/octave slope)
- High-pass 12 (12 dB/octave slope)
- Low-pass 12 (12 dB/octave slope)

A scalable display shows the overall EQ frequency response curve. All filter parameters can be independently automated.

---

## MDW EQ Controls

These controls let you edit the parameters of an MDW EQ plug-in inserted on a track.

### Spectrum Display Scale

Click and hold anywhere within the spectrum display to view the Spectrum Display Scale pop-up menu and choose the desired vertical scale of the display. The available choices are  $\pm 6$ ,  $\pm 12$  or  $\pm 24$  dB. Selecting a  $\pm 6$  dB scale is useful for viewing more subtle equalizer adjustments. Changing the scale of the display has no effect on the equalizer's audio output.

### In Level (Input Level)

The In Level adjusts the audio input to the plug-in from  $-24$  dB to  $+6$  dB. Drag or double-click and enter numerical data to adjust this parameter. It is often useful to lower the operating level at this point when the user encounters overloads in MDW EQ.

## Phase Reverse Switch

Click the Phase Reverse button to reverse the absolute phase of the audio. If the EQ is linked to other channels, it will invert the phase of those as well—maintaining the phase relationship between them, but reversing their relationship to the audio in the rest of the session.

## Overflow Indicators

When the Overflow Indicator LEDs are lit, they indicate signal overload at the corresponding stage in the signal path. Adjust levels accordingly to avoid audio distortion. Click to dismiss.

## Snapshot A/B Select

The A & B snapshot feature allows you to compare two snapshot settings. Toggle between the two snapshots settings by pressing the A/B Snapshot Button.

### Copy Snapshot A->B (Copy Snapshot B->A)

While Snapshot A is selected you may duplicate all settings to Snapshot B.

## Filter Bands

Bands provide precise filtering of the audio signal in series. Filter type for each band is individually selectable.

## Frequency Selector

This Selector sets the frequency of the selected filter band. Frequency range is from 10 Hz to 41 kHz.

## Filter Q Selector

The Q Selector sets the Q of the Peak/Dip filter of the selected filter band.

## Cut/Boost

This feature provides up to  $\pm 24$  dB of frequency cut or boost.

## Filter Type Selector

This Selector provides a choice of high-pass (6 or 12 dB/oct), low-pass (6 or 12 dB/oct), high-shelf, low-shelf, peak/dip, or bypass operation. For the MDW 5-Band EQ, Band 5 offers additional filter choices which include high-pass 18 and high-pass 24 (18 or 24 dB/oct), and low-pass 18 and low-pass 24 (18 or 24 dB/oct).

## Filter In/Out

The In/Out button allows you to switch a filter band on or off.

## IsoPeak

IsoPeak provides a function in Peak/Dip filter mode whereby this band is soloed, and a sharp peak is temporarily set. Click on the colored band number button to initiate IsoPeak for that band. Click and hold on the background area of the band to reveal a pop-up menu allowing you to adjust the IsoPeak Q value.

## Band Pop-up Menu

Click and hold on the background area of each band to reveal a pop-up menu allowing you to adjust the IsoPeak Q value as well as the option to copy and paste individual band settings.

## Adjusting MDW EQ Parameters

The best way to use MDW EQ is to insert it on a track and adjust its parameters during playback to hear the changes in real time.

You can edit MDW EQ knob parameters by dragging or by double-clicking and then typing a value into the knob's text display.

## Editing Parameters with a Mouse

When using a mouse, MDW EQ knob controls are adjusted by dragging horizontally or vertically. Values increase as you drag upward or to the right. Values decrease as you drag downward or to the left.

### To edit a parameter with a mouse:

- 1 Begin audio playback so that you can hear parameter changes in real time.
- 2 From the Filter Type selector pop-up menu on the desired band, select the filter type.
- 3 Drag the parameter knob horizontally or vertically to adjust the parameters for the effect you want.



*Dragging a knob horizontally*



*Dragging a knob vertically*

## Keyboard Shortcuts

- For finer adjustments, Command-drag the control.
- To return a control to its default value, Option-click the control.

## Editing Parameters with a Keyboard

Knob controls display their current value. You can edit this value by double-clicking and entering a value with your computer keyboard. If multiple plug-in windows are open, click the Target button on the plug-in whose parameters you want to edit.

When lit (red), the Target button indicates its window is targeted. When unlit (gray) the Target button indicates its window is not targeted.

### To edit a parameter with a computer keyboard:

- 1 Double-click the numerical text you want to edit.



Displaying a control manually (after double-clicking)

- 2 Select a numerical value for editing by doing one of the following:

- Type the desired value. For negative values, type a minus sign in front of the number.
- or –
- Press the Up Arrow on your keyboard to increase a value. Press the Down Arrow to decrease a value.



*In fields that support values in kilohertz, typing “k” after a number value will multiply the value by 1000. For example, type “1.2k” to enter a frequency of 1200 Hz.*

- 3 Do one of the following:

- Press Enter on the numeric keyboard after typing a value to input the value without leaving the selected text box.
- or –
- Press Return on the alpha keyboard to enter the value and leave keyboard editing mode.

## Copying and Pasting Band Parameters within a Plug-In

### To Copy band parameters:

- In the background of the band you wish to copy, click and hold down mouse button until pop-up appears. Then choose Copy band settings.



### Copying band parameters

 
### To Paste band parameters:

- Click and hold anywhere on the background of the band you wish to copy. Then choose Paste band settings.



### Pasting band parameters

## Using ISOPeak Mode

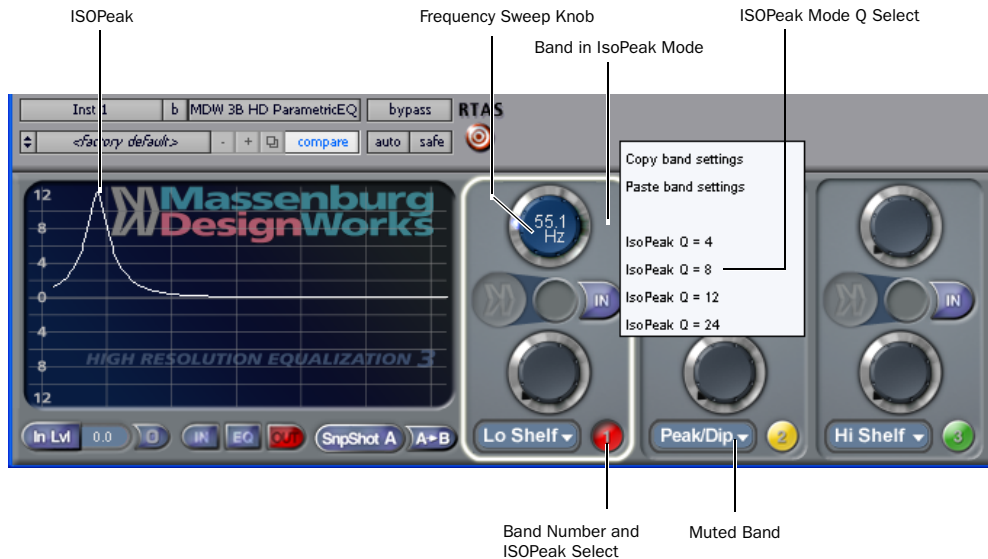

### Using ISOPeak Mode

- 1 Choose a band on which to use IsoPeak by clicking on the band number. You'll hear only that band selected for IsoPeak and only the absolute peak that the band generates (which will sound very narrow). The spectrum display will show that peak being monitoring.
- 2 The Q of this peak can be selected from the band's pop-up menu (click and hold down the mouse button on the background of the band until the pop up appears). The default value is a Q of 8.
- 3 “Sweep” the frequency listening to the effect of the peak boost to find the artifact or area of interest.
- 4 Click the band button to exit the IsoPeak mode and return to normal operation. If you intend to remove a frequency, you'll now have to adjust the Q and the Boost/Cut, but your Frequency value will be that which you found sweeping in IsoPeak.





## appendix a

# DSP Requirements for TDM Plug-Ins

The number of TDM plug-ins you can use at one time depends on how much DSP power is available in your system. Since the TDM hardware on Pro Tools cards provide dedicated DSP for plug-ins, plug-in performance is not limited by CPU processing power.

The DSP tables on the following pages show the theoretical number of instances of each plug-in that can be powered by a single DSP chip on Pro Tools|HD cards. DSP usage differs according to card type.

**A** *DSP tables show the theoretical maximum performance when no other plug-ins or system tasks (such as I/O) are sharing available DSP resources. You will typically use more than one type of plug-in simultaneously. The data in these tables are provided as guidelines to help you gauge the relative efficiency of different plug-ins on your system. They are not guaranteed performance counts that you should expect to see in typical real-world sessions and usage.*

There are a total of nine DSP chips on a Pro Tools|HD card (HD Core, HD Process, and HD Accel). HD Core and HD Process cards provide identical chip sets. HD Accel cards provide newer, more powerful DSP chips (making the HD Accel card ideal for DSP-intensive plug-ins, and for high sample rate sessions).

Not all plug-ins are supported on all types of chips. The following tables indicate the number of compatible chips per card.

### Using Multi-Mono Plug-Ins on Greater-Than-Stereo Tracks

Plug-Ins used in multi-mono format on greater-than-stereo tracks require one mono instance per channel of the multi-channel audio format. For example, a multi-mono plug-in used on a 5.1 format track, requires six mono instances since there are six audio channels in the 5.1 format.

---

# MDW 5-Band EQ DSP Requirements

## HD Accel Card

MDW 5-Band EQ operates in mono and multi-mono (for stereo and multichannel usage) formats at samples rates up to 192kHz, and has the following instance counts for Pro Tools|HD Accel systems.

*Table 2. Maximum instances of MDW EQ plug-in per DSP chip for an HD Accel card at different sample rates*

MDW EQ	44.1/48 kHz	88.2/96 kHz	176.4/192 kHz
Mono	4	4	1
Stereo	2	2	n/a

## HD Core and Process Card

MDW 5-Band EQ operates in mono and multi-mono (for stereo and multichannel usage) formats at samples rates up to 192kHz, and has the following instance counts on Pro Tools|HD systems.

*Table 3. Maximum instances of MDW EQ plug-in per DSP chip for an HD Core or HD Process card at different sample rates*

MDW EQ	44.1/48 kHz	88.2/96 kHz	176.4/192 kHz
Mono	2	2	1
Stereo	1	1	n/a

---

## MDW 3-Band EQ DSP Requirements

MDW 3-Band EQ operates in mono and multi-mono (for stereo and multichannel usage) formats at samples rates up to 192kHz, and has the following instance counts for Pro Tools|HD Accel systems:

### HD Accel Card

*Table 4. Maximum instances of MDW EQ plug-in per DSP chip for an HD Accel card at different sample rates*

MDW EQ	44.1/48 kHz	88.2/96 kHz	176.4/192 kHz
Mono	8	8	3
Stereo	4	4	n/a

MDW 3-Band EQ operates in mono and multi-mono (for stereo and multichannel usage) formats at samples rates up to 192kHz, and has the following instance counts on Pro Tools|HD systems.

### HD Core and Process Card

*Table 5. Maximum instances of MDW EQ plug-in per DSP chip for an HD Core or HD Process card at different sample rates*

MDW EQ	44.1/48 kHz	88.2/96 kHz	176.4/192 kHz
Mono	3	3	1
Stereo	n/a	n/a	n/a

## Monitoring DSP Usage

The System Usage window (Windows > Show System Usage) shows approximately how much DSP is available in your system and how it is being used in the current Pro Tools session.



*For more information about DSP usage and allocation, see the Pro Tools Reference Guide.*



**Avid**  
2001 Junipero Serra Boulevard  
Daly City, CA 94014-3886 USA

**Technical Support (USA)**  
Visit the Online Support Center at  
[www.avid.com/support](http://www.avid.com/support)

**Product Information**  
For company and product information,  
visit us on the web at [www.avid.com](http://www.avid.com)