



**96i I/O™**

Version 8.0



## Legal Notices

This guide is copyrighted ©2008 by Digidesign, a division of Avid Technology, Inc. (hereafter "Digidesign"), with all rights reserved. Under copyright laws, this guide may not be duplicated in whole or in part without the written consent of Digidesign.

003, 96 I/O, 96i I/O, 192 Digital I/O, 192 I/O, 888|24 I/O, 882|20 I/O, 1622 I/O, 24-Bit ADAT Bridge I/O, AudioSuite, Avid, Avid DNA, Avid Mojo, Avid Unity, Avid Unity ISIS, Avid Xpress, AVoption, Axiom, Beat Detective, Bomb Factory, Bruno, C|24, Command|8, Control|24, D-Command, D-Control, D-Fi, D-fx, D-Show, D-Verb, DAE, Digi 002, DigiBase, DigiDelivery, Digidesign, Digidesign Audio Engine, Digidesign Intelligent Noise Reduction, Digidesign TDM Bus, DigiDrive, DigiRack, DigiTest, DigiTranslator, DINR, D-Show, DV Toolkit, EditPack, Eleven, HD Core, HD Process, Hybrid, Impact, Interplay, LoFi, M-Audio, MachineControl, Maxim, Mbox, MediaComposer, MIDI I/O, MIX, MultiShell, Nitris, OMF, OMF Interchange, PRE, ProControl, Pro Tools M-Powered, Pro Tools, Pro Tools|HD, Pro Tools LE, QuickPunch, Recti-Fi, Reel Tape, Reso, Reverb One, ReVibe, RTAS, Sibelius, Smack!, SoundReplacer, Sound Designer II, Strike, Structure, SYNC HD, SYNC I/O, Synchronic, TL Aggro, TL AutoPan, TL Drum Rehab, TL Everyphase, TL Fauxldr, TL In Tune, TL MasterMeter, TL Metro, TL Space, TL Utilities, Transfuser, Trillium Lane Labs, Vari-Fi Velvet, X-Form, and XMON are trademarks or registered trademarks of Digidesign and/or Avid Technology, Inc. Xpand! is Registered in the U.S. Patent and Trademark Office. All other trademarks are the property of their respective owners.

Product features, specifications, system requirements, and availability are subject to change without notice.

Guide Part Number 9106-59120-00 REV A 11/08

## Documentation Feedback

At Digidesign, we're always looking for ways to improve our documentation. If you have comments, corrections, or suggestions regarding our documentation, email us at **[techpubs@digidesign.com](mailto:techpubs@digidesign.com)**.

## Warning

This product contains chemicals, including lead, known to the State of California to cause cancer and birth defects or other reproductive harm. *Wash hands after handling.*

## Communications & Safety Regulation Information

### Compliance Statement

The model 96i I/O complies with the following standards regulating interference and EMC:

- FCC Part 15 Class A
- EN55103 – 1, environment E4
- EN55103 – 2, environment E4
- AS/NZS 3548 Class A

## Radio and Television Interference

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules.

### Communications Statement

This equipment has been tested to comply with the limits for a Class A digital device. Changes or modifications to this product not authorized by Digidesign, Inc., could void the Certification and negate your authority to operate the product. This product was tested for CISPR compliance under conditions that included the use of peripheral devices and shielded cables and connectors between system components. Digidesign recommends the use of shielded cables and connectors between system components to reduce the possibility of causing interference to radios, television sets, and other electronic devices.

### Safety Statement

This equipment has been tested to comply with USA and Canadian safety certification in accordance with the specifications of UL Standards; UL1419 and Canadian CSA standard; CSA C22.2 No.1-M90. Digidesign Inc., has been authorized to apply the appropriate UL & CUL mark on its compliant equipment.

### Important Safety Instructions

When using electric or electronic equipment, basic precautions should always be followed, including the following:

- Read all instructions before using this equipment.
- To avoid the risk of shock, keep this equipment away from rain water, and other moisture. Do not use this equipment if it is wet.
- The equipment should only be connected to the correct rating power supply as indicated on the product.
- Do not attempt to service the equipment. There are no user-serviceable parts inside. Please refer all servicing to authorized Digidesign personnel.
- Any attempt to service the equipment will expose you to a risk of electric shock, and will void the manufacturer's warranty.
- The product should be connected only to the correct power supply as indicated on the product.

### Warning!

- Pro Tools|HD audio interfaces need room at their sides to maintain proper air flow and cooling.
- Do not install these units into a rack or other enclosure that doesn't leave room on either side for the unit fans.
- Do not block the sides of the units (where fans are), or disconnect the fan.
- If the units are racked up in a case, remove all lids, doors, or covers before operating the units.
- Failure to do so can result in the units overheating very quickly, which can permanently damage them.

**contents**

**Chapter 1. Introduction to the 96i I/O** ..... 1

    What's Included ..... 1

    System Requirements and Compatibility Information ..... 1

    Digidesign Registration ..... 2

    About this Guide ..... 2

    About [www.digidesign.com](http://www.digidesign.com) ..... 3

**Chapter 2. 96i I/O Hardware Overview** ..... 5

    The 96i I/O Front Panel ..... 5

    96i I/O Back Panel ..... 7



## chapter 1

# Introduction to the 96i I/O

The Digidesign® 96i I/O™ 16-input, 2-output digital audio interface features 24-bit analog-to-digital (A/D) and digital-to-analog (D/A) converters, and supports sample rates up to 96 kHz.

### 96i I/O Features

- 16 discrete input channels and two output channels, with 4-segment LED meters on each channel. Input and output features include:
  - 16 channels of 24-bit, 96 kHz-capable analog input, with adjustable input sensitivity
  - 2 channels of 24-bit, 96 kHz-capable analog output, with selectable operating level
  - 2 channels of 24-bit, 96 kHz-capable digital S/PDIF RCA input and output
- Loop Sync In and Out for synchronizing additional Pro Tools|HD® interfaces and peripherals
- External Clock In and Out (1x Word clock) for synchronizing with external devices
- Expansion DigiLink port for connecting additional Pro Tools|HD® audio interfaces

---

### What's Included

- 96i I/O audio interface
- AC power cable
- DigiLink cable (18 inches [0.46m])
- BNC cable (18 inches [0.46m])
- 96i I/O Guide
- Digidesign Registration Information Card

---

### System Requirements and Compatibility Information

The 96i I/O requires a Digidesign-qualified Pro Tools|HD system.

The 96i I/O can be used as the only audio interface in a Pro Tools|HD system (no other audio interface present), or as an expansion I/O when combined with a 192 I/O™, 192 Digital I/O™, 96 I/O™, or other 96i I/O audio interface.

**A** *The 96i I/O cannot be used in standalone mode (it must be used with Pro Tools).*

The 96i I/O does not provide a Legacy port. For more information on connecting the 96i I/O, see the *HD Setup Guide*.

Digidesign can only assure compatibility and provide support for hardware and software it has tested and approved.

For complete system requirements and a list of Digidesign-qualified computers, operating systems, hard drives, and third-party devices, refer to the latest information on the Digidesign website:

[www.digidesign.com/compatibility](http://www.digidesign.com/compatibility)

---

## Digidesign Registration

Review the enclosed Digidesign Registration Information Card and follow the instructions on it to quickly register your purchase online. Registering your purchase is the only way you can be eligible to receive complimentary technical support and future upgrade offers. This is one of the most important steps you can take as a new user.

---

## About this Guide

This guide describes the 96i I/O features and connectors.

For complete instructions on connecting and configuring your Pro Tools|HD system, see the *HD Setup Guide*.


For additional information about using Pro Tools software, see the *Pro Tools Reference Guide*.


## Conventions Used in This Guide


Digidesign guides use the following conventions to indicate menu choices and key commands:


Convention	Action
File > Save	Choose Save from the File menu
Control+N	Hold down the Control key and press the N key
Control-click	Hold down the Control key and click the mouse button
Right-click	Click with the right mouse button

The following symbols are used to highlight important information:

 *User Tips are helpful hints for getting the most from your system.*

 *Important Notices include information that could affect your data or the performance of your system.*

 *Shortcuts show you useful keyboard or mouse shortcuts.*

 *Cross References point to related sections in this guide and other Digidesign guides.*

---

## About [www.digidesign.com](http://www.digidesign.com)

The Digidesign website ([www.digidesign.com](http://www.digidesign.com)) is your best online source for information to help you get the most out of your Pro Tools system. The following are just a few of the services and features available.

**Product Registration** Register your purchase online. See the enclosed Digidesign Registration Information Card for instructions.

**Support and Downloads** Contact Digidesign Technical Support or Customer Service; download software updates and the latest online manuals; browse the Compatibility documents for system requirements; search the online Answerbase; or join the worldwide Pro Tools community on the Digidesign User Conference.

**Training and Education** Study on your own using courses available online or find out how you can learn in a classroom setting at a certified Pro Tools training center.

**Products and Developers** Learn about Digidesign products; download demo software or learn about our Development Partners and their plug-ins, applications, and hardware.

**News and Events** Get the latest news from Digidesign or sign up for a Pro Tools demo.

**Pro Tools Accelerated Videos** Watch the series of free tutorial videos. Accelerated Videos are designed to help you get up and running with Pro Tools and its plug-ins.

To learn more about these and other resources available from Digidesign, visit the Digidesign website ([www.digidesign.com](http://www.digidesign.com)).






## chapter 2

# 96i I/O Hardware Overview

This chapter describes the front and back panel features of the 96i I/O.

 See the *HD Setup Guide* for complete system installation and configuration instructions. If you are adding the 96i I/O to an existing system, see the *Expanded Systems Guide*.

## The 96i I/O Front Panel

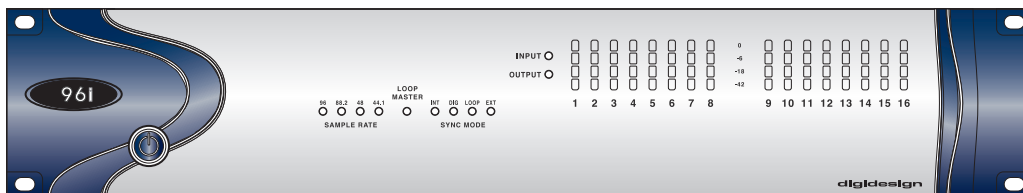


Figure 1. 96i I/O front panel

### Power Switch and LED Ring

This button turns the 96i I/O on and off.

The LED ring around the power button lights green when the unit has powered up successfully and is connected to an active Pro Tools|HD system. If the LED ring is orange, the unit has power, but the computer it is connected to is shut down.

### Sample Rate LEDs

These LEDs display the current Pro Tools sample rate: 44.1 kHz, 48 kHz, 88.2 kHz, and 96 kHz. (The 96i I/O goes offline whenever the current Pro Tools sample rate is 176.4 kHz or 192 kHz.)

## Loop Master LED

The LOOP MASTER LED indicates which Pro Tools|HD audio interface is the master Pro Tools peripheral. Loop Master defaults to the first Pro Tools|HD I/O connected to the core Pro Tools|HD card. On Pro Tools|HD (for PCIe) this is the Accel Core card. On Pro Tools|HD (for PCI) this is the HD Core card.

The Loop Master LED is always lit when only a single interface is present, regardless of the synchronization mode.

In expanded systems, only one Pro Tools|HD I/O can be Loop Master at a time. When you change the clock source to an external clock on a Pro Tools|HD I/O, it automatically becomes the Loop Master and all other Pro Tools|HD I/Os in the chain switch to Loop Slave mode.

## Sync Mode LEDs

The SYNC MODE LEDs indicate the current Pro Tools Clock Source and Sync mode:

**INT (Internal)** Indicates the 96i I/O is the Pro Tools clock master.

**DIG (Digital)** Indicates that an external digital source is providing master clock to Pro Tools at the 96i I/O S/PDIF port.

**LOOP (Loop Sync)** Indicates that the 96i I/O is slaving to another Pro Tools|HD I/O through Loop Sync.

**EXT (External)** Indicates the 96i I/O External Clock In port is providing master clock to Pro Tools.

For more information on Pro Tools clock options, see the *HD Setup Guide*.

## Input and Output LEDs and Meters

16 sets of four-segment LEDs indicate signal level for each of the 96i I/O input channels.

These meter LEDs indicate -42 dB, -18 dB, -6 dB, and 0 dB (from bottom to top), referenced to Full Scale digital.



*Full Scale digital (0 dBFS) does not always indicate signal clipping levels. Use the on-screen meters in Pro Tools to determine whether a signal is clipping. For more information, see the HD Setup Guide.*

Two additional LEDs, located to the left of the meters, indicate whether the meters display input or output levels; the meters indicate input levels by default, and can be switched from the Hardware Setup dialog in Pro Tools.

# 96i I/O Back Panel

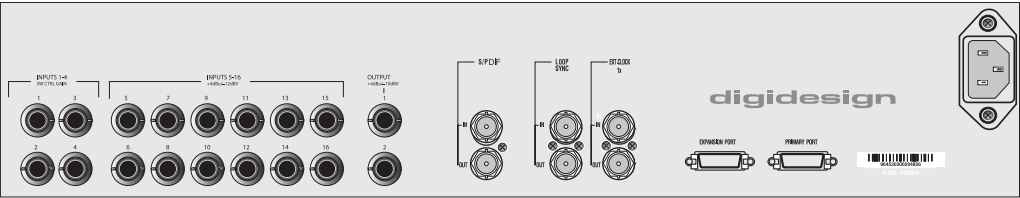


Figure 2. 96i I/O back panel

## Analog Inputs

The 96i I/O has 16 balanced, 1/4-inch TRS connectors for analog audio input connections.

- ◆ Inputs 1–4 provide six stages of software-adjustable operating level sensitivity. Choices range from –12.0 dB(V) to +4.0 dBu, with default sensitivity set to –8 dB(V).
- ◆ Inputs 5–16 are software-switchable between –8 dBV and +4 dBu operating level sensitivity.

The 96i I/O inputs can accommodate a wide range of line-level devices including synthesizers, samplers, sound modules, and effects devices.

All analog inputs are balanced, and feature 24-bit, 96 kHz analog-to-digital converters, with 14 dB of headroom above +4 dBu (fixed, requiring no calibration). Unbalanced connections are supported with the use of standard 1/4-inch mono phone plugs.

### 96i I/O input wiring for balanced connections

Tip	Hot (or +)
Ring	Cold (or –)
Sleeve	Ground

## Analog Outputs

The 96i I/O has two balanced, 1/4-inch TRS jacks for analog audio output connections.

The 96i I/O analog outputs feature 24-bit digital-to-analog converters. Output operating levels are software-switchable between +4 dBu and –10 dB(V) operating levels.

The 96i I/O is factory calibrated at +14 dB headroom, yielding a maximum output level of +18 dBu when in +4 dBu operating mode. When set to –10 dB(V) operating mode, maximum output level is +4 dBV.


Unbalanced connections are supported with the use of standard 1/4-inch mono phone plugs.

### 96i I/O output wiring for balanced connections

Tip	Hot (or +)
Ring	Cold (or –)
Sleeve	Ground

## S/PDIF Digital In and Out

These are unbalanced RCA jacks that accept and output a stereo S/PDIF digital data stream. S/PDIF supports up to 24-bit audio, at sample rates up to 96 kHz. S/PDIF input can be chosen as the input source for channels 1–2 in the Hardware Setup dialog. S/PDIF output is mirrored to analog outputs 1–2.

 *To maintain data integrity and minimize jitter, use only 75-ohm coaxial cable for S/PDIF connections.*

## Loop Sync In and Out

Loop Sync is a dedicated clock signal for synchronizing multiple Pro Tools|HD peripherals together. Loop Sync uses a Word clock signal based on sample rates of either 44.1 kHz or 48 kHz. As sample rate increases in the system, Loop Sync continues to operate at a base rate of 44.1 kHz or 48 kHz, depending upon the higher rate.


The Loop Sync In and Out ports are standard BNC connectors that output a 1x Word clock signal. Loop Sync should only be used to chain multiple Pro Tools|HD peripherals together (audio interfaces and the Digidesign SYNC HD™ or SYNC I/O™).

For more information on Loop Sync and its connection requirements, see the *HD Setup Guide*.

## EXT. CLOCK In and Out

The External Clock In and Out ports are standard BNC connectors that receive and output a Word clock signal. These ports can be used to synchronize the 96i I/O to any device that requires (or provides) word clock.

External Clock In and Out are configured in the Hardware Setup dialog.

 *Because the Loop Sync and Word Clock ports pass crucial timing information, use high-quality 75-ohm coaxial cables.*

## Primary Port

The Primary Port is used to connect the 96i I/O to your Pro Tools|HD cards, or to another Pro Tools|HD audio interface, using a DigiLink cable.

- When the 96i I/O is the only audio interface in the system, the Primary Port is connected directly to the Accel Core card (Pro Tools|HD for PCIe systems) or HD Core card (Pro Tools|HD for PCI systems).
- When the 96i I/O is used as an additional I/O in an expanded Pro Tools|HD system, the 96i I/O Primary Port can be connected to an HD Accel or HD Process card, or to the Expansion port on a 192 I/O, 192 Digital I/O, or 96 I/O. For information about connecting expanded Pro Tools|HD systems, see the *Expanded Systems Guide*.

## Expansion Port

The Expansion Port is used to connect an additional Pro Tools|HD I/O to the 96i I/O. Using a DigiLink cable (one is included with each Pro Tools|HD audio interface), another 96i I/O can be connected to the Expansion Port for an additional 16 channels of input.

## AC Power

This connector accepts a standard AC power cable. The 96i I/O is auto power-selecting (100V to 240V) and will automatically work with a standard modular cable to connect to AC power receptacles in any country.



[www.digidesign.com](http://www.digidesign.com)

---

**DIGIDESIGN**

2001 Junipero Serra Boulevard  
Daly City, CA 94014-3886 USA  
Tel: 650.731.6300  
Fax: 650.731.6399

**TECHNICAL SUPPORT (USA)**

Tel: 650.731.6100  
Fax: 650.731.6375

**PRODUCT INFORMATION (USA)**

Tel: 800.333.2137

**INTERNATIONAL OFFICES**

Visit the Digidesign website  
for contact information